



WARRANTY INFORMATION

ACTION SEE SAW

IMPORTANT

Please read and retain this manual as it will assist with identification for parts and service.

ACTION SEE SAW

Limited Warranty

ACTION SPORTS warrants its SEE-SAW to be free from defects in material and workmanship under normal use and service conditions for a period of **12 months** from the date of purchase of this article. Evidence of unfair usage or incorrect adjustment by the owner will void this promise.

All warranty coverage extends only to the original retail purchaser from the date of purchase. ACTION SPORTS obligation under this Warranty is limited to replacing or repairing the product, at the discretion of our authorised service centre. Any enquiries relating to warranties or spare parts must first be directed to our **Freecall 1800 465 070** who will then assist you in the appropriate action to be taken. For efficient processing of your enquiry please have proof of purchase, retailer name you purchased the item from and the brand on the product.

This warranty does not extend to any damage to a product caused by abuse, improper or abnormal usage, or repairs not provided by ACTION. Nor does this warranty extend to products used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning and by snow or ice). No other Warranty beyond that specifically set forth above is authorised by ACTION.

Our sales and service centre has been set up to provide assembly assistance, replacement parts and accessories, and to efficiently handle all warranty related matters.


Freecall 1800 465 070

9:00am – 4:30pm Monday to Friday (excluding Public Holidays)

9:00am – 3:00pm Saturday

Website: www.actionsports.com.au

Page 6 of 6

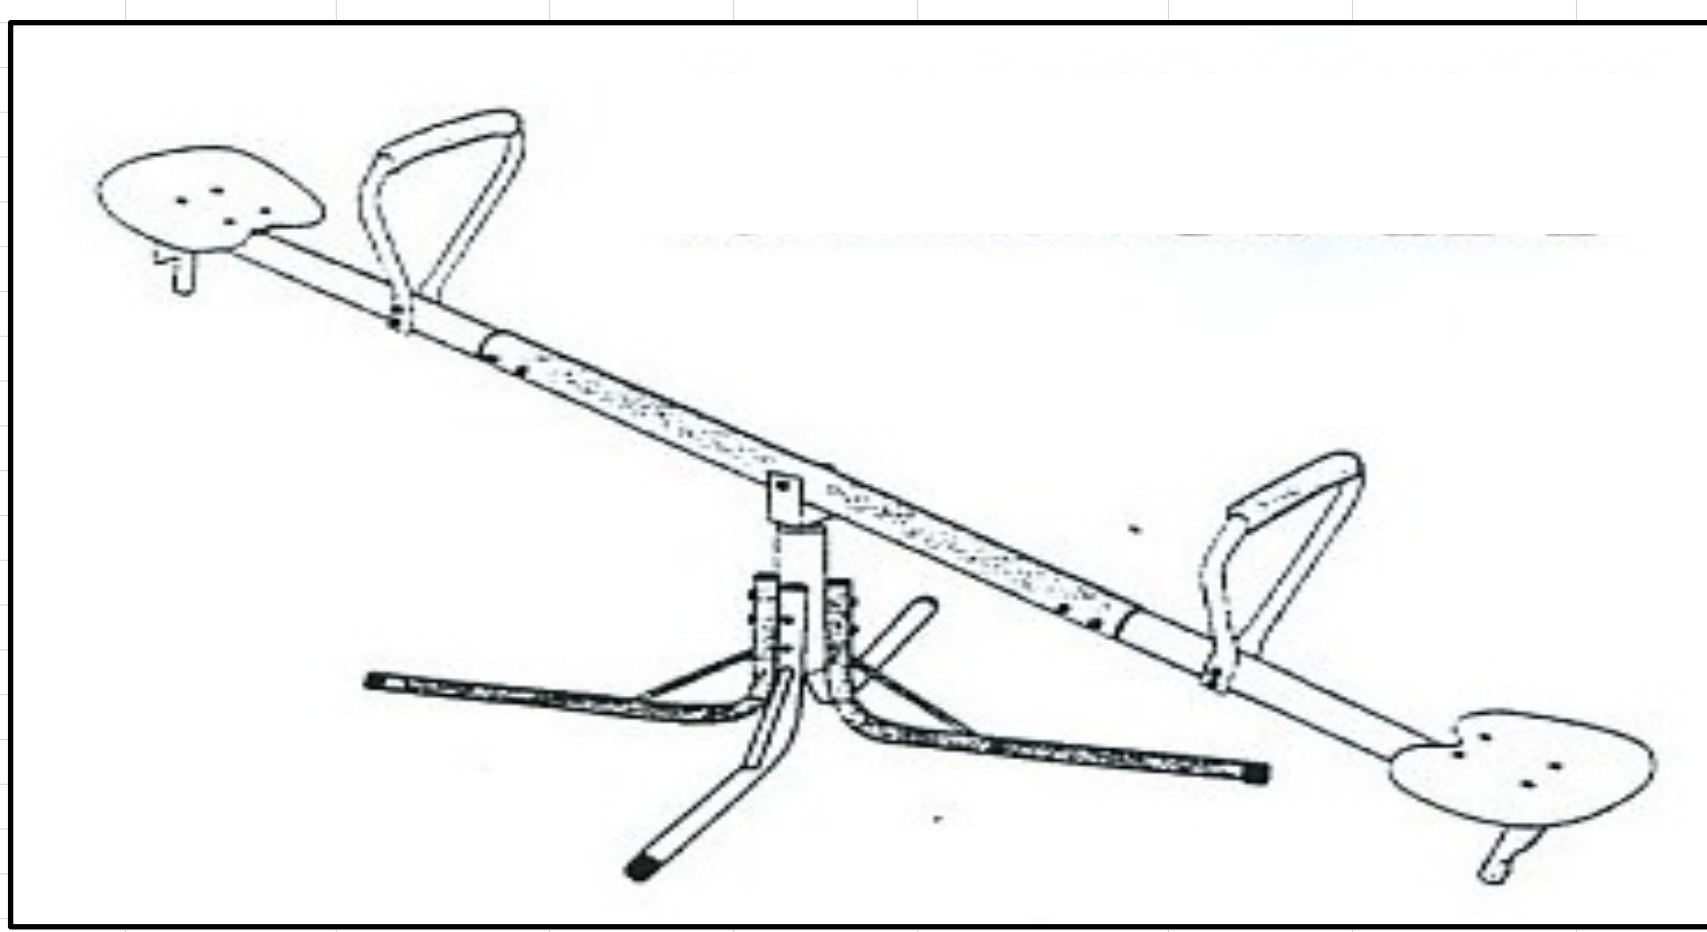

Technical data:

Size, assembled approx: L: 2000 mm W: 1000 mm H: 630 mm
 Weight (net) app: 7.3kg

The products is tested according to the valid standards of (EN 71)

Importer: Action Sports Equipment Pty Ltd.
 website: www.actionsports.com.au

 
SAFETY NOTES

To prevent damage and accidents to persons and/or property, the following instructions and advice must be followed:

1. Thoroughly read all parts of this manual and strictly follow the instructions before using.
2. Do not use any accessories other than those provided and /or specified by the manufacturer.
3. Not suitable for children under 3 years of age
4. This equipment must be assembled and checked by an adult.
5. Please retain complete instructions for future reference.
6. For outdoor use.
7. Check all nuts and bolts for tightness and tighten when required.
8. Check all coverings and bolts for sharp edges and replace when required.
9. Place this equipment on a level surface at least 2 meters from any structure or obstruction. Such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
10. Other persons must never be allowed to stand within the range of action of the equipment when in use.
11. DO NOT install this equipment over concrete, asphalt or any other hard surface.
12. Leave all fittings finger tight until assembly is complete (for ease of construction)- then tighten firmly.
13. Always supervise young children at play
14. This item is not designed for adults or maximum weight of 2 children not to exceed 70kgs in combined weight.
15. DO NOT allow children to stand on the seats.
16. DO NOT allow children to get off the seats until seesaw has stopped moving.
17. DO NOT allow loose, baggy (or hooded) clothes to be worn, since children can get trapped and may be unable to free themselves.
18. DO NOT allow children to climb on parts on this equipment not intended for this purpose.
19. Regularly check the item for wear and damage, removing the item from use when necessary until replacement parts are fitted.
20. Please remove all packaging including shrunk-on film, polybag, carton, pallet, ...ect. before giving to a child.
21. This product is for home use only and has not been designed for commercial use in play fitness centers, nurseries, etc.
22. Failure to assemble this item as per the instruction may cause injury to the user.
23. Please keep these instruction in a safe place for future reference.
24. Age suitability: 3-10 years old.
25. Do not put your hand near moving parts.

Assembly Instructions

PARTS LIST



M6 110mm bolt (x 4)



M6 60mm bolt (x 4)



M8 70mm bolt (x 1)



M6 50mm bolt (x 6)



M6 25mm bolt (x 8)



M6 washer (x 44)



M6 washer (x 22)



M6 nut (x 22)



Upper support tube (x 1)



Lower support tube (x1)



LEG (X 2)



 
LEG (X 2)




SEAT (X 2)




Main centre bar (x 1)



Main side bar (x 2)

 

Handle bars w/foam (x 2)

 

M8 washer (x 2)



M8 washer (x 1)



 
M8 nut (x 1)



Spanner (x 1)



Spanner (x 1)



Cap for leg (x 8)



Plastic tube between K & H (x 2)



Small plastic tube on support tube (x 1)



Cap for lower support (x 1)

 
TOOL REQUIRED



1. Philips head screw driver





2. Combination Wrench 10



3. Combination Wrench 13

Assembly Steps:



Step 1 Seat and Handle Bar Assembly Instructions

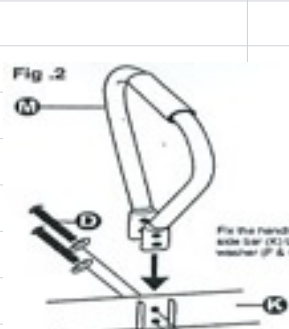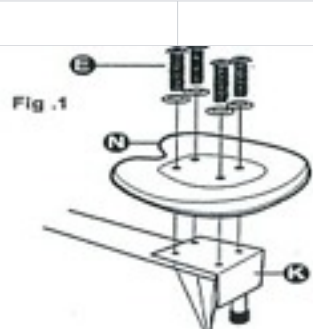



- 1-1 Firstly secure the plastic seat (N) onto each of the main side bars (K) using 25mm screw bolt (E), washer (F & G) and nut (P) (See Fig. : 1)
- 1-2 Fix the handle bars (M) onto the main side bar (K). Using 50mm screw bolts (D), washer (F & G) and nut (P). (See Fig. : 2)

Step 2 Main Bar Assembly Instructions

Notice: Once assembled you can modify the length of each end of the see-saw by choosing which screw holes to use. This is useful if the play item will be used by children of different ages or sizes.

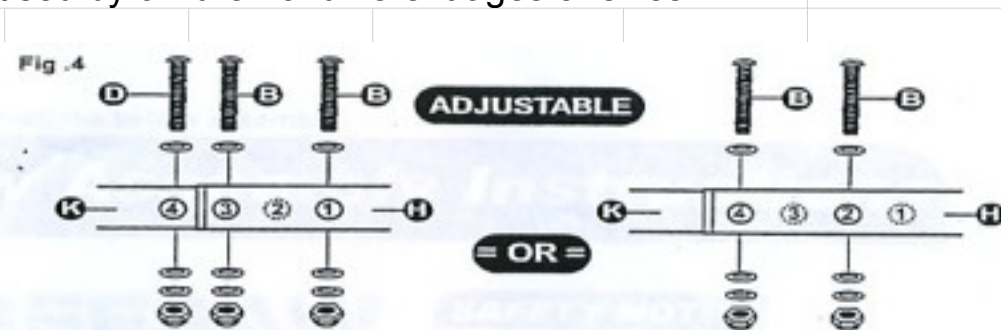
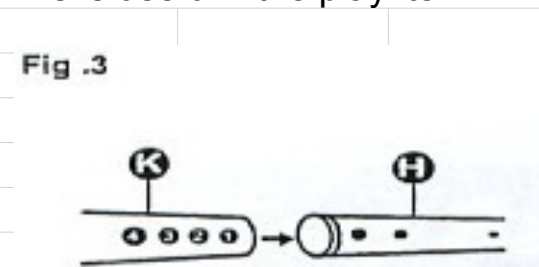


- 2-3 Slide the main side bar (K) into the main center bar (H). (See Fig. : 3)
 Insert small plastic tube (V) between K & H
- 2-4 **Warning!** To avoid finger entrapment, These bolts must be tightened as shown. (See Fig. : 4)

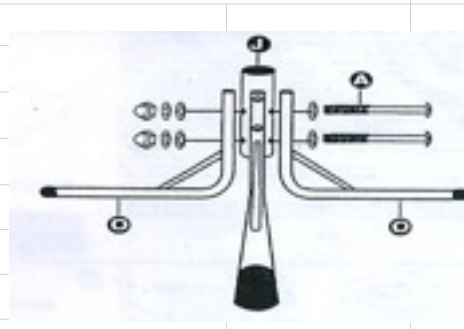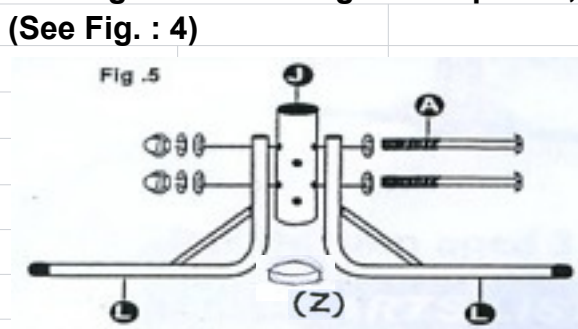

- 2-5 Use the four 110mm screw bolts(A), washer (F & G) and nut (P) to attach the legs to the lower support tube (J). And, insert the cap (Z) and the lower support tube.

Attach the legs (L) to the highest of holes on the lower support tube and legs (O) to the remaining set of lower holes. (See Fig. : 5)

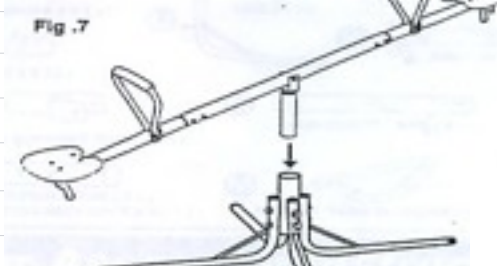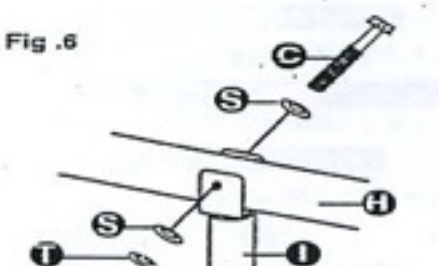

- 2-6 Use the 70mm screw bolt: (C), washer (S & T) and nut (U) to attach the upper support tube (I) to the main center bar (H). (See Fig. : 6)
 Insert small plastic tube (W) on support tube.
- 2-7 Insert plastic cap X into each end of Leg
 Your rotating see-saw is now ready to enjoy! (See Fig.: 7)

Care and Maintenance

1. This equipment must be assembled and checked by an adult.
2. Regularly check all nuts and bolts for tightness before use and replace any worn, defective or missing parts. DO NOT try to repair broken parts.
3. Regularly check seat, steel tube and other parts are tightened completely and replace worn & damaged parts when necessary.
4. Remove wore and damage parts from use when necessary until replacement parts are fitted.
5. At the beginning of each season, please oil all metal parts to maximise lifespan of product. Regularly oil when necessary during the usage season.
6. Seesaw set placement:
 - (a) Place this equipment on a level surface, at least 2 meters from any structure or obstruction. Such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
 - (b) Do not install this equipment over concrete, asphalt or any other hard surface.
 - (c) Place this equipment in a well lit area.
 - (d) This product is not designed for indoor use.
7. Weather condition:
 - (a) Seats should be kept dry--do not use when they are wet.
 - (b) Do not use in high winds or during volatile weather conditions.
8. This item is not designed for adults or maximum combined weight of 2 children not to exceed 70kgs.
9. Please keep these instruction in a safe place for future reference.