



Action Sports Equipment Pty Ltd.

72 Silverwater Rd, Silverwater, NSW, Australia, 2128

Parts & Service Enquiries: 1800 465 070 (Australia); 09 488 4750 (New Zealand)

Or email: service@actionspares.com.au


Sales Enquiries: 1800 777 137 (Australia); 09 488 4750 (New Zealand)

Or visit our website: www.actionsports.com.au

NETBALL STAND

Model: S000052

Assembly, Installation, Care, Maintenance and Use Instructions

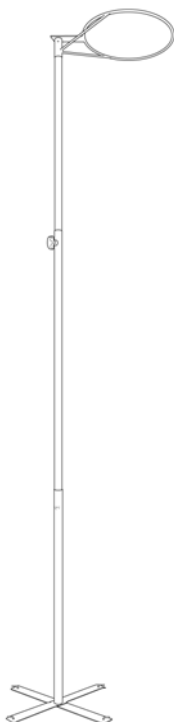

IMPORTANT

Please read and retain this manual as it will assist with identification for parts and service.

Read these materials prior to assembling and using this netball stand.

SAFETY INFORMATION

Before Assembly

The following must be read before you start assembling this unit:

- ◆ Follow the assembly instructions exactly as outlined.
- ◆ Adult installation is required.
- ◆ Make sure the site selected to install this product is on a level surface and clear of obstacles like cables, power lines, tree limbs and other possible hazards.
- ◆ Do not assemble this product if there are any parts missing. If something is missing when assembling this unit, please notify us of the part number of the exact nut, bolt or part that is missing.
- ◆ Inspect the Netball Stand before each use to and replace any worn, defective, or missing parts.



 
 

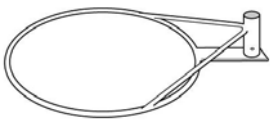


WARNING

- Improper installation or swinging on the ring may cause serious injury or death.
- This product is not suitable for children under 3 years of age
- Ensure that all nuts and bolts are fully tight before using this product.
- Make sure the Netball Stand is properly and securely anchored to the ground before each use. An improper anchored Netball Stand may collapse and cause serious injury.
- Beware of the surrounding environment, making sure the play area is free of obstacles while playing with this product.
- Do not play with the Netball Stand in windy condition or bad weather.
- Always read and follow the manufacturer's assembly and user instructions.

CARE AND MAINTENANCE

- Regularly inspect the product to ensure there are no damages or wears on nuts and bolts, connection points etc.
- Replace defective components immediately, otherwise keep it out of use until the problem is fixed.
- Disassemble the product when it is not in use. Store in a dry clean place.

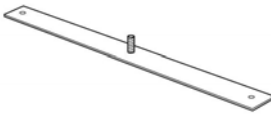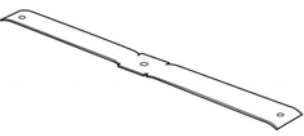
PARTS LIST OF NETBALL STAND

Ref	Description	Illustration	Qty
A	Base Piece-1		1
B	Base Piece-2		1
C	Lower Pole		1
D	Middle Pole		1
E	Upper Pole		1
F	Basketball Hoop		1
G	Height Adjuster		1
H	Pegs		4


Use the above Parts List to make sure all parts are present before the assembly of the equipment. Contact Customer Service at 1800 465 070 (Australia) or 09 488 4750 (New Zealand) if any parts are missing.

ASSEMBLY INSTRUCTIONS


1. Connect the base piece-2 (B) to the base piece-1 (A) to form a cross. See figure 1.

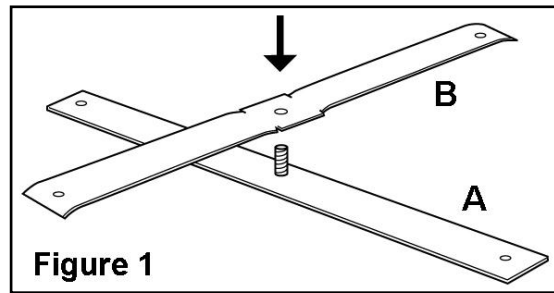

2. Screw the lower pole (C) where there are built-in screw threads at the bottom of the pole to the base piece as shown in Figure 2. Make sure the screw thread is firmly tightened into position.

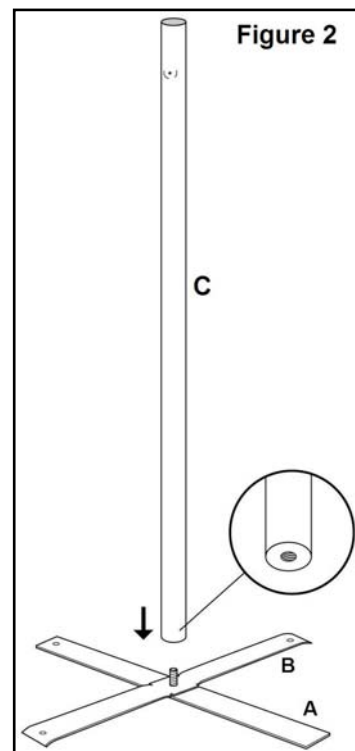

3. Connect the basketball hoop (F) to the upper pole (E) as shown in Figure 3. Ensure spring loaded locking pin is aligned with locking hole and pin locks into the secured position.

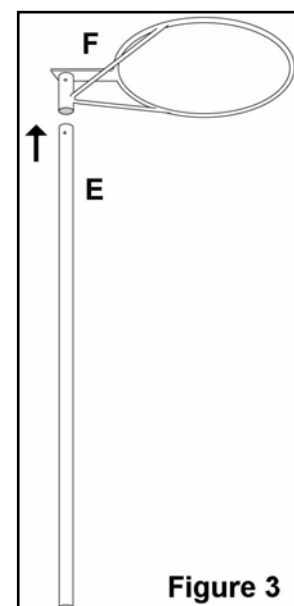

- Slide the upper pole (E) into the middle pole (D) and adjust the pole height with the Height Adjuster (G). Please see Figure 4.

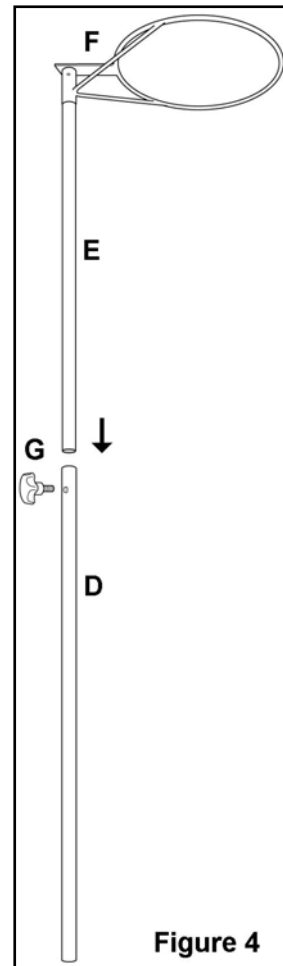


Figure 4


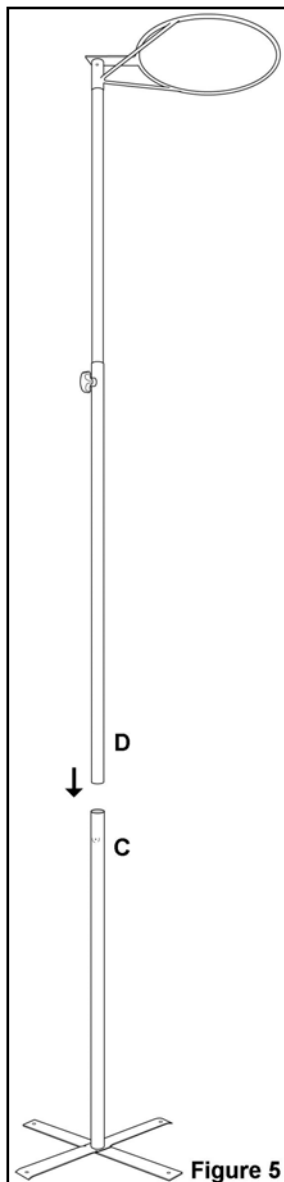


Figure 5


- Attach the middle pole (D) to the lower pole (C) as shown in Figure 5.

- When the netball stand is placed on outdoor lawn or soil, it should be anchored with the four pegs (H) provided in the package to prevent carrying off by wind. Through the peg into each hole of base piece and hammer it to the ground securely. Please see Figure 6.

WARNING: DO NOT USE THE NETBALL STAND UNTIL GROUND ANCHOR PEGS ARE SECURELY IN POSITION. NETBALL STAND IS NOT RECOMMENDED FOR USE WHEN THE BASE IS NOT ANCHORED.

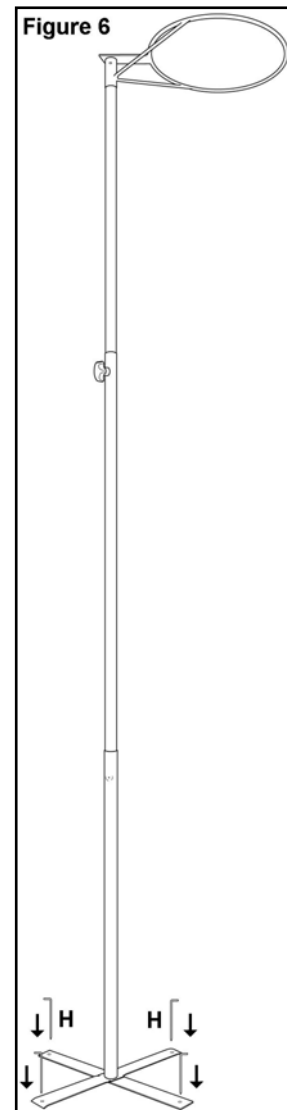

The assembly of the netball stand is now completed.

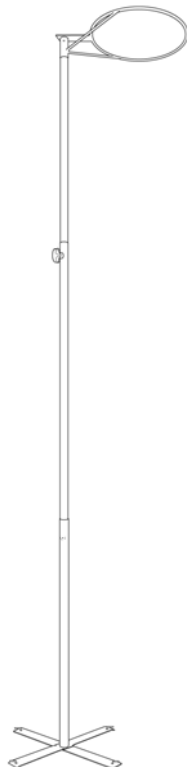

Netball Stand Limited Warranty

ACTION SPORTS warrants its Netball Stand products to be free from defects in material and workmanship under normal use and service conditions.

The various components of the Netball Stand are warranted against defects and workmanship for 6 months.

All warranty coverage extends only to the original retail purchaser from the date of purchase. ACTION SPORTS' obligation under this Warranty is limited to replacing or repairing, at ACTION's option, the product or parts therein. Any enquiries relating to warranties or spare parts must be directed to our **Freecall 1800 465 070 (Australia) or Standard call 09 488 4750 (New Zealand)**. For efficient processing of your enquiry please have relevant date of purchase, retailer name you purchased the item from and the brand on the product. This warranty does not extend to any damage to a product caused by abuse, improper or abnormal usage (as detailed in this instruction manual), or repairs not provided by ACTION. Nor does this warranty extend to products used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning and by snow or ice). No other Warranty beyond that specifically set forth above is authorised by ACTION.

Our sales and service centre has been set up to provide assembly assistance, replacement parts and accessories, and to efficiently handle all warranty related matters.

Freecall 1800 465 070 (Australia) or email service@actionsports.com.au
Standard Call 09 488 4750 (New Zealand)

Opening hours: 9am – 5pm Monday – Friday (excluding public holidays)
9am – 3pm Saturday

www.actionsports.com.au