

 


## Fun Slide

S002373A / B002856  
Instruction Manual

# ATTENTION!

**SAFETY INFORMATION, INSTALLATION, CARE AND MAINTENANCE INSTRUCTIONS**  
**READ PRIOR TO ASSEMBLING AND USING THE TRAMPOLINE**

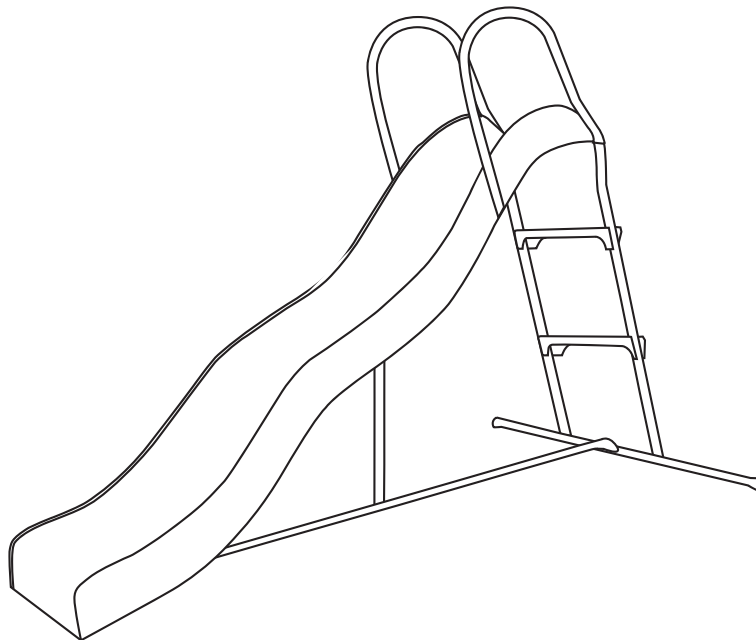

**WARNING:** To ensure everyone's safety, please do not attempt to assemble this slide without reading this instruction manual carefully. Failure to comply with this warning may result in injury and/or property damage.

- Prior to assembly, this slide includes small parts/accessories that are not suitable for children under 3 years of age as they may cause a choking hazard.
- This slide should be assembled by an adult.
- Only use this slide on a soft, flat level surface.
- **This slide has a maximum user weight of 45kg.**
- This slide is suitable for users aged 3 years and over.
- Do not allow more than 1 person on the slide at any time.
- This slide is designed for domestic use only, it is not intended for commercial use in play centres, nurseries etc

For parts and service enquiries, please contact our National Service Centre on 1300 777 137 or e-mail [service@unclebills.com.au](mailto:service@unclebills.com.au)

Online Product  
Information  
Available Here



# Contents

---

- 3** Warnings
- 4** Parts List
- 5** Hardware List
- 6** Assembly Instructions
- 14** Warranty Information

 
 


 
 
 


# Warnings



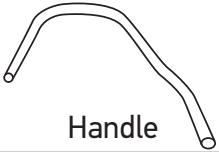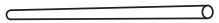


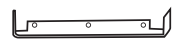 


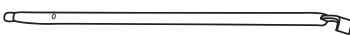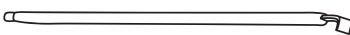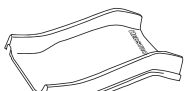---

To reduce the risk of serious injury, read the entire manual before you assemble or use this Slide. In particular, please note the following safety precautions. Please keep this manual in a safe place for future reference.

1. Prior to assembly, this Slide includes small parts/accessories that are not suitable for children under 3 years of age as they may cause a choking hazard.
2. It is the responsibility of the owner to ensure that all users of this Slide are adequately informed of all warnings and precautions. This Slide is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities; or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the Slide by a person responsible for their safety.
3. This Slide should be assembled by 2 adults.
4. Place this Slide on a soft level surface with at least 2.5m diameter of clear space surrounding the unit.
5. This Slide is suitable for users aged 3 years and over.
6. **This slide has a maximum user weight of 45kg.**
7. Do not allow more than 1 person on the Slide at any time.
8. This slide is designed for domestic use only, it is not intended for commercial use in play centres, nurseries etc
9. Do not use the Slide when wet.
10. Do not use the Slide while under the influence of alcohol or drugs. Balance, perception and assessment of risk will be affected and may lead to injury.
11. Do not allow any activity underneath the Slide.
12. Do not use foreign objects with the Slide, use of any foreign objects will void the warranty.
13. Inspect the Slide before each use, replace any worn or defective parts. If you require replacement parts to be sent out, please contact our National Service Centre (details can be found in the warranty pages at the end of this manual).
14. Climb on and off the Slide, do not jump on or off. It is dangerous to jump from the Slide to the ground when dismounting, or onto the Slide when mounting. Always use two hands to hold onto the frame when getting on or off the Slide. Small children may need assistance getting on or off of the Slide.
15. Jewellery should be removed before using the Slide as this may cause an injury to the user and/or damage the Slide.
16. Users should only use the Slide under adult supervision.
17. The maximum fall height for this product is 86cm.
18. Do not orientate the slide directly towards the sun.

# Parts List

| Part No. | Description  | Qty |
|----------|--|-----|
| 3        | <br>Handle                | 2   |
| 4        | <br>Stabiliser Bar        | 1   |
| 5        | <br>Ladder Tube           | 2   |
| 6        | <br>Vertical Support Tube | 1   |
| 7        | <br>Front Tie Bar       | 1   |
| 8        | <br>Rear Tie Bar        | 1   |
| 12       | <br>Upper Slide         | 1   |
| 13       | <br>Lower Slide         | 1   |
| 14       | <br>Step                | 2   |

 
 


 
 
| Part No. | Description   | Qty |
|----------|---|-----|
| 16       | <br>Spanner              | 1   |
| 17       | <br>Allen key            | 1   |
| 27       | <br>Lower Support Tube   | 2   |
| 29       | <br>Support Strap        | 2   |
| 30       | <br>Support Strap      | 1   |
| 31       | <br>Support Strap      | 1   |
| 34       | <br>Connector          | 4   |
| 36       | <br>Upper Support Tube | 2   |





**NOTE:** Some parts may be supplied pre-assembled.

**Ruler - Use this ruler to help correctly identify the hardware**




# Hardware List
 
| Part No. | Description   | Qty |
|----------|---|-----|
| F1       | <br>M6 Bolt 17mm   | 5   |
| F1a      | <br>M6 Bolt 20mm   | 6   |
| F2       | <br>M6 Bolt 66mm   | 2   |
| F3       | <br>M6 Bolt 35mm   | 8   |
| F4       | <br>M6 Bolt 25mm | 1   |
| F5       | <br>M6 Bolt 30mm | 1   |

| Part No. | Description   | Qty |
|----------|---|-----|
| F6       | <br>M6 Bolt 35mm | 5   |
| F7       | <br>M6 Bolt 38mm | 4   |
| F8       | <br>M6 Bolt 63mm | 4   |
| F9       | <br>M6 Bolt 60mm | 2   |

# Assembly Instructions



 
---

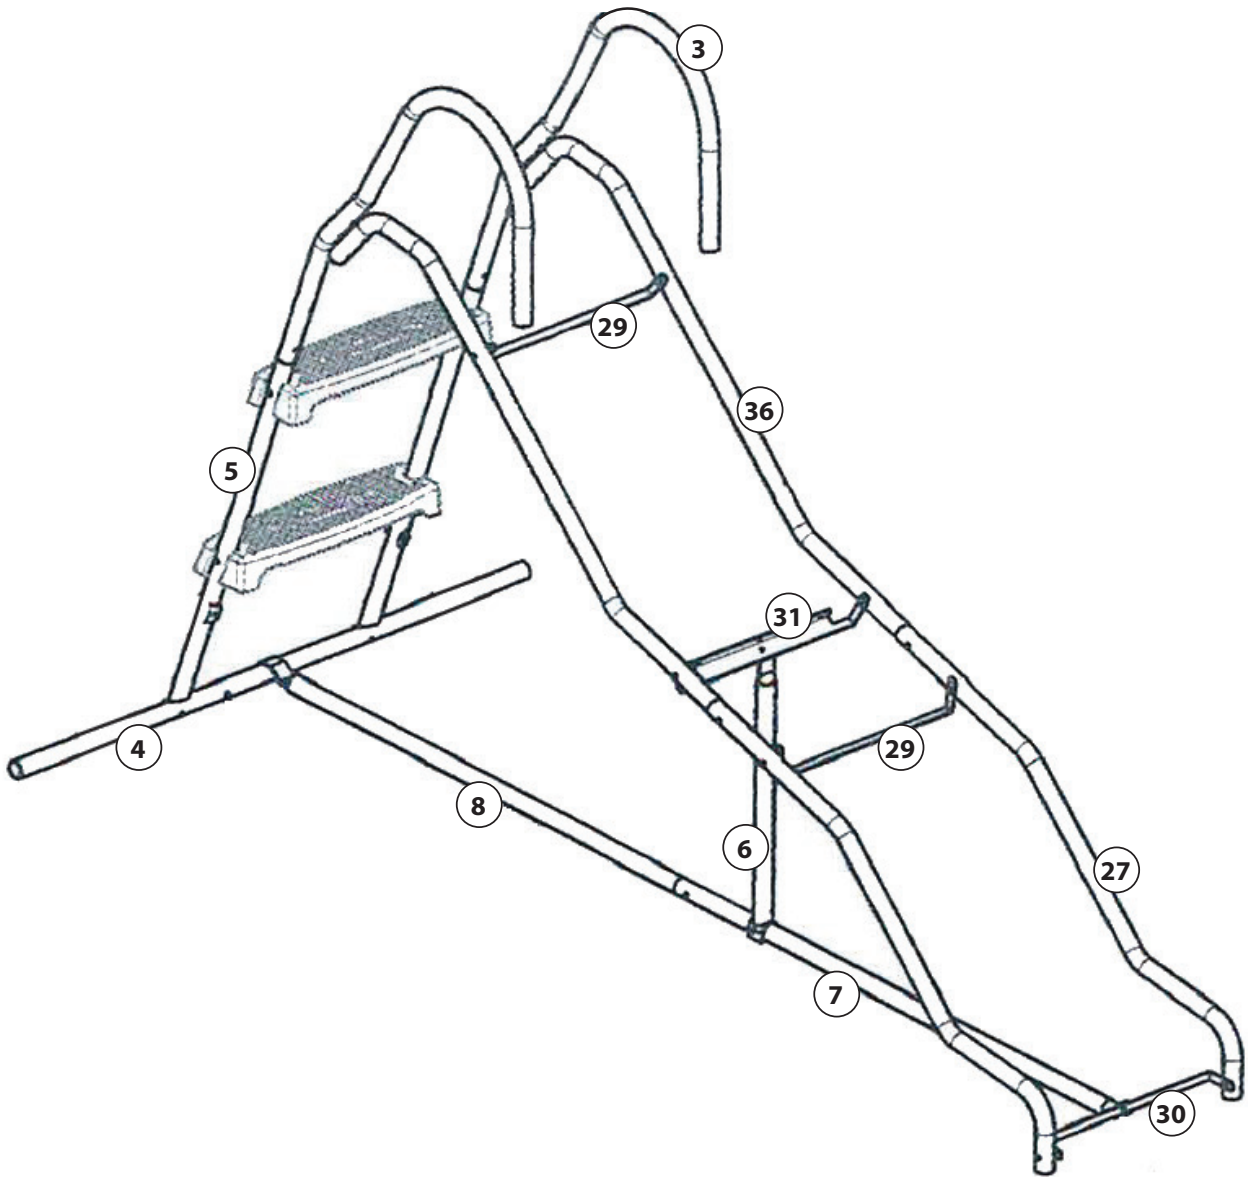

# Assembly Instructions (cont.)

## Step 1

   Slide chute assembly

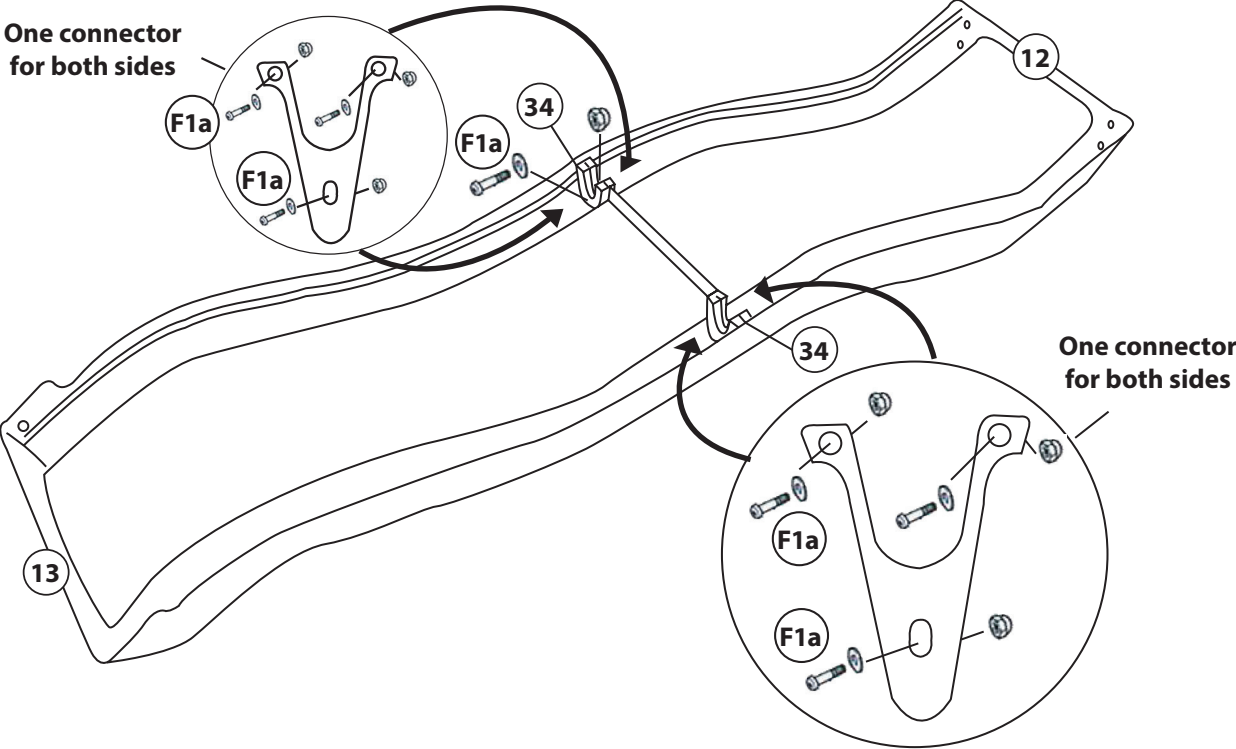




# Assembly Instructions (cont.)

## Step 2

Bracket assembly

 
 
 
The F3 bolts for part 31 only need to be finger tight

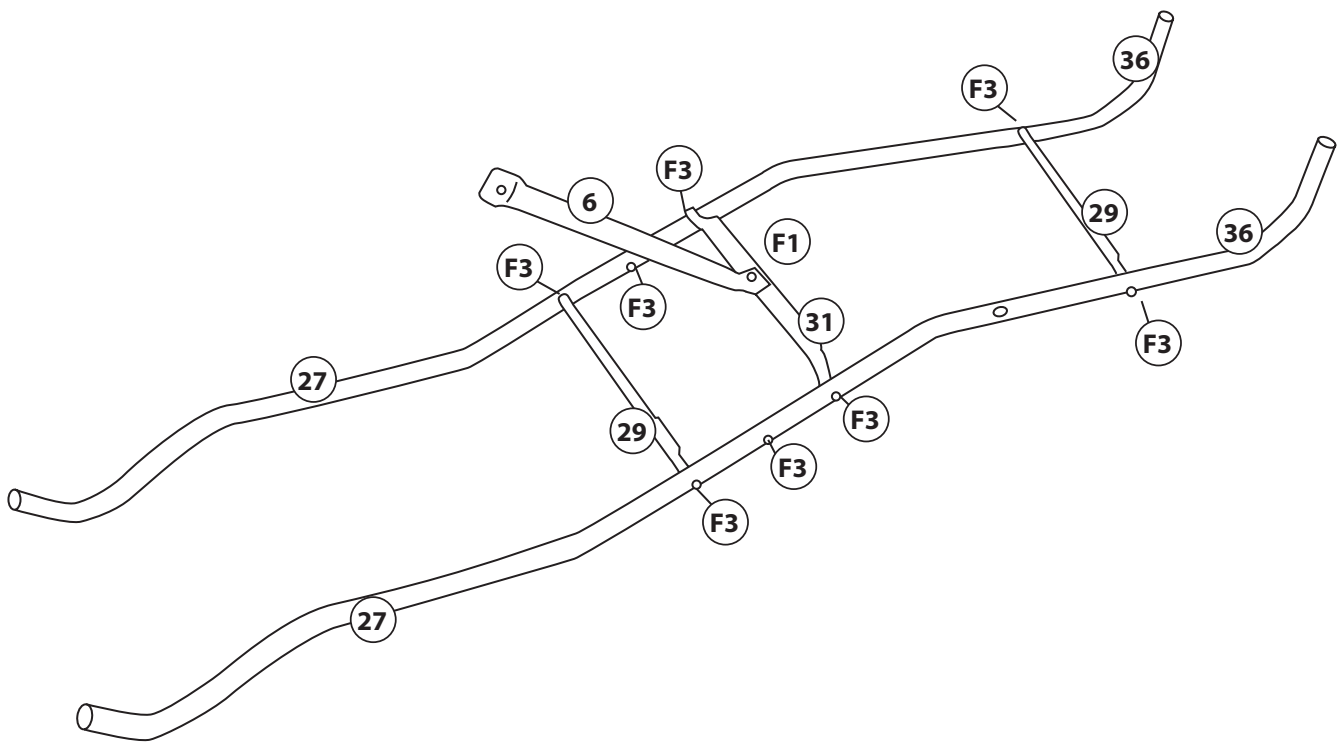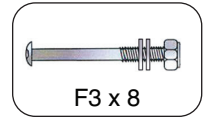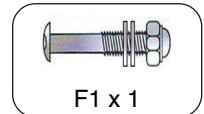

# Assembly Instructions (cont.)

## Step 3


 
 
 
Assembly of the bracket onto the slide

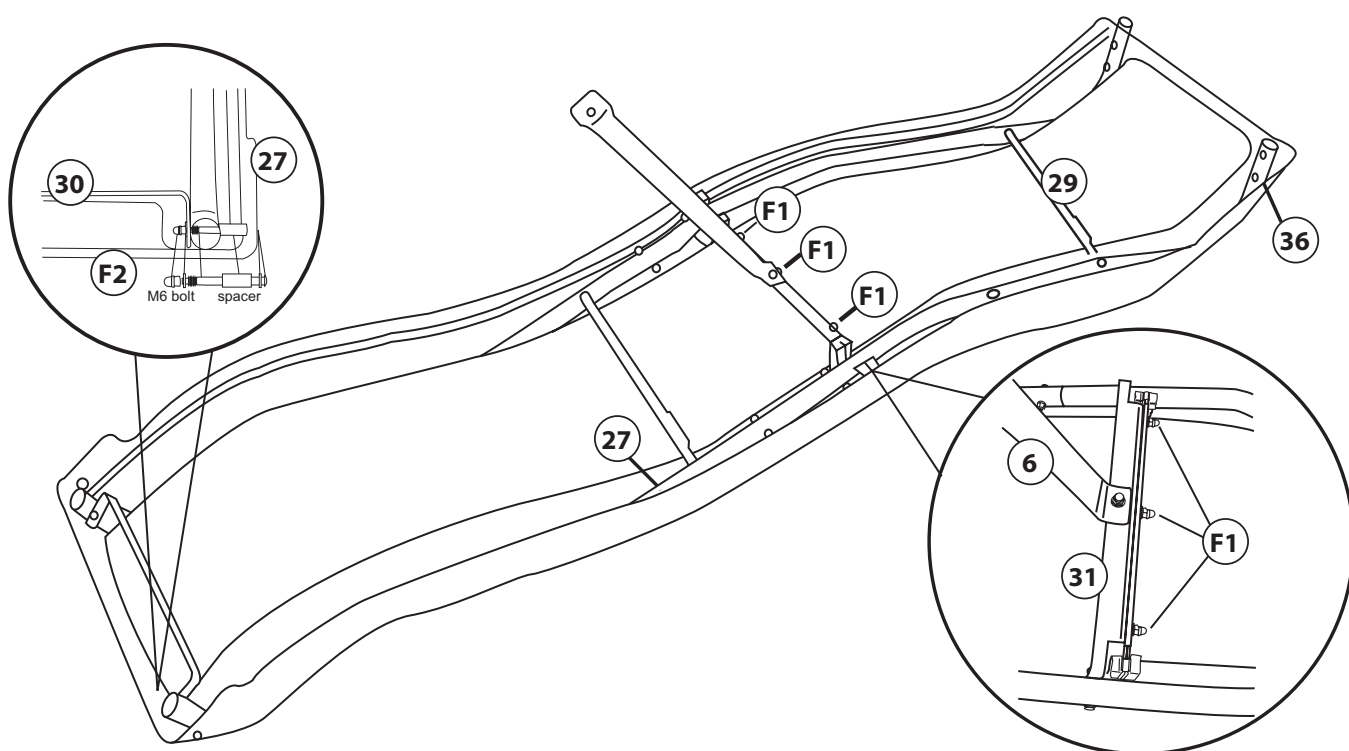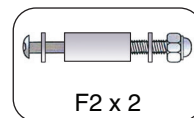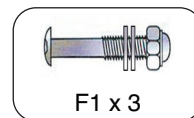

# Assembly Instructions (cont.)

## Step 4

  
 
 
Tie bar assembly

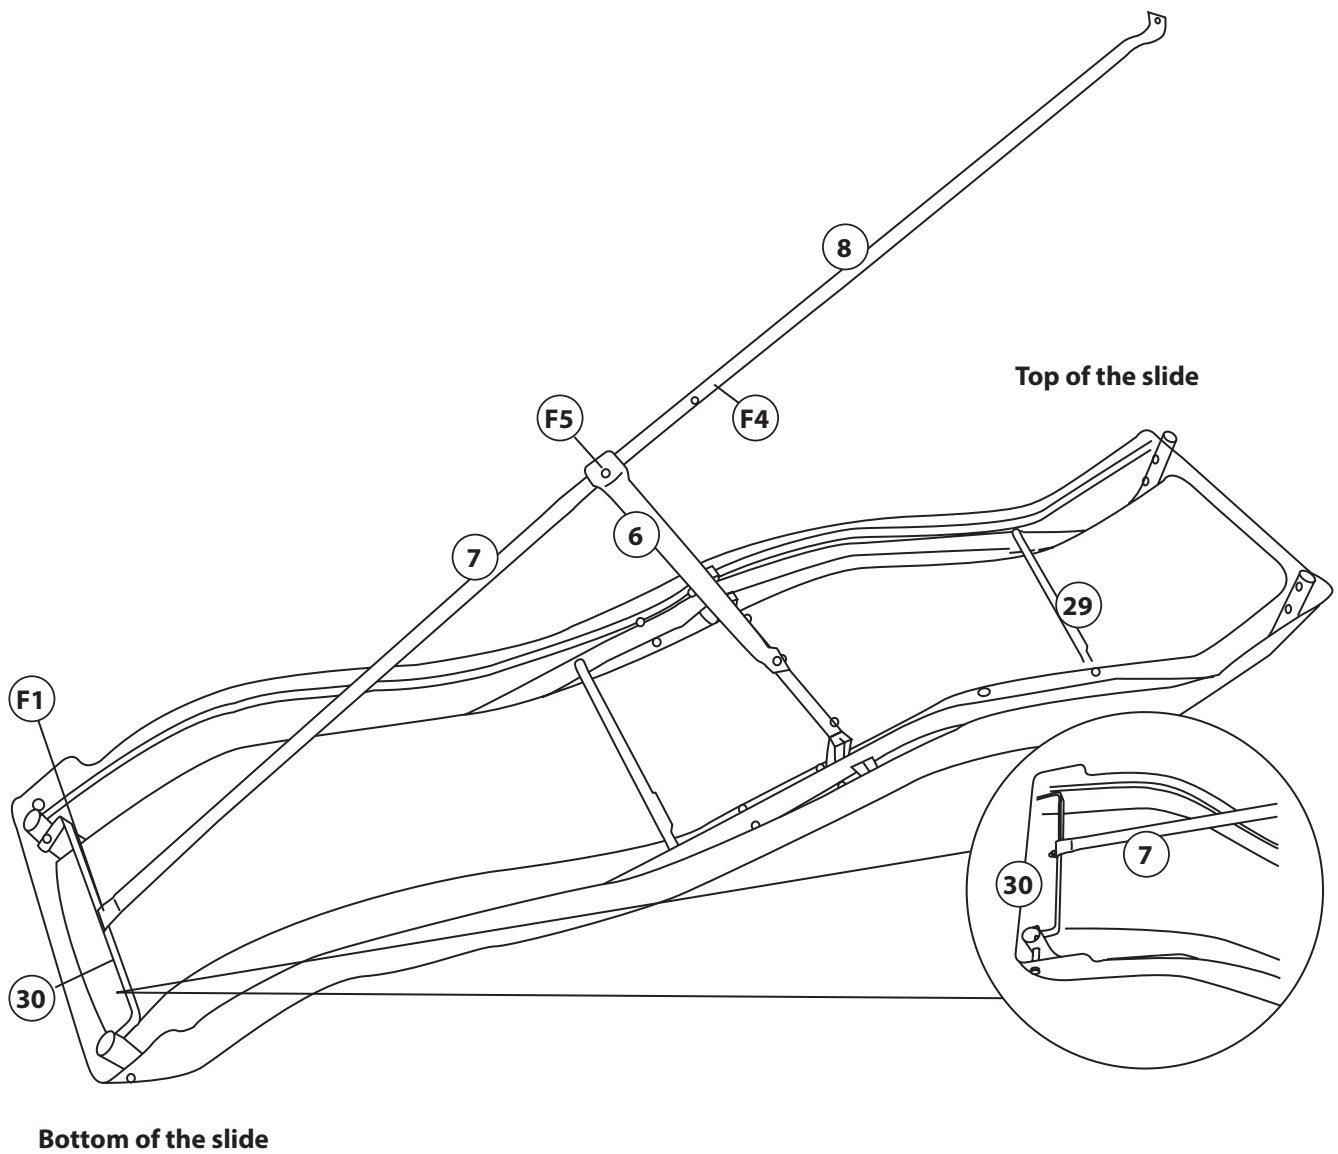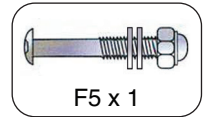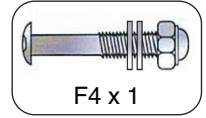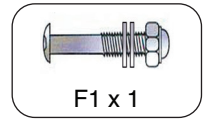

# Assembly Instructions (cont.)

## Step 5

 
 
 
Ladder assembly

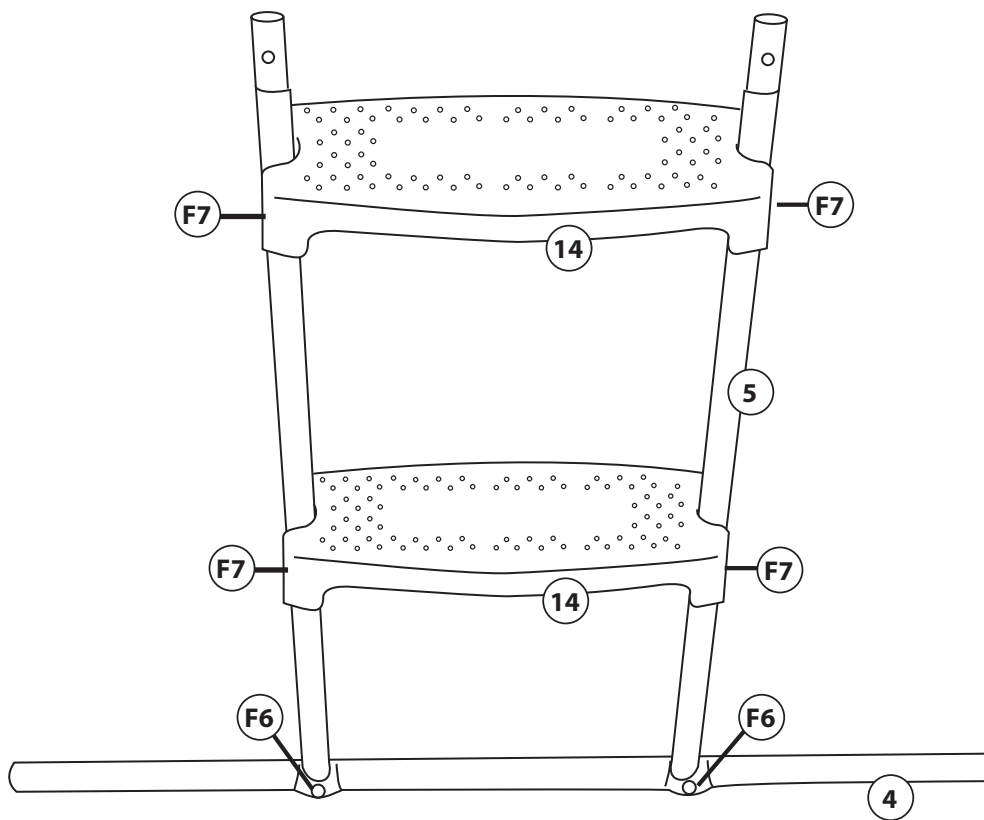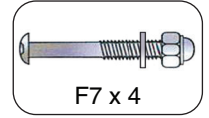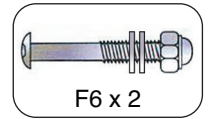

# Assembly Instructions (cont.)

## Step 6

   Assembling the ladder to the slide

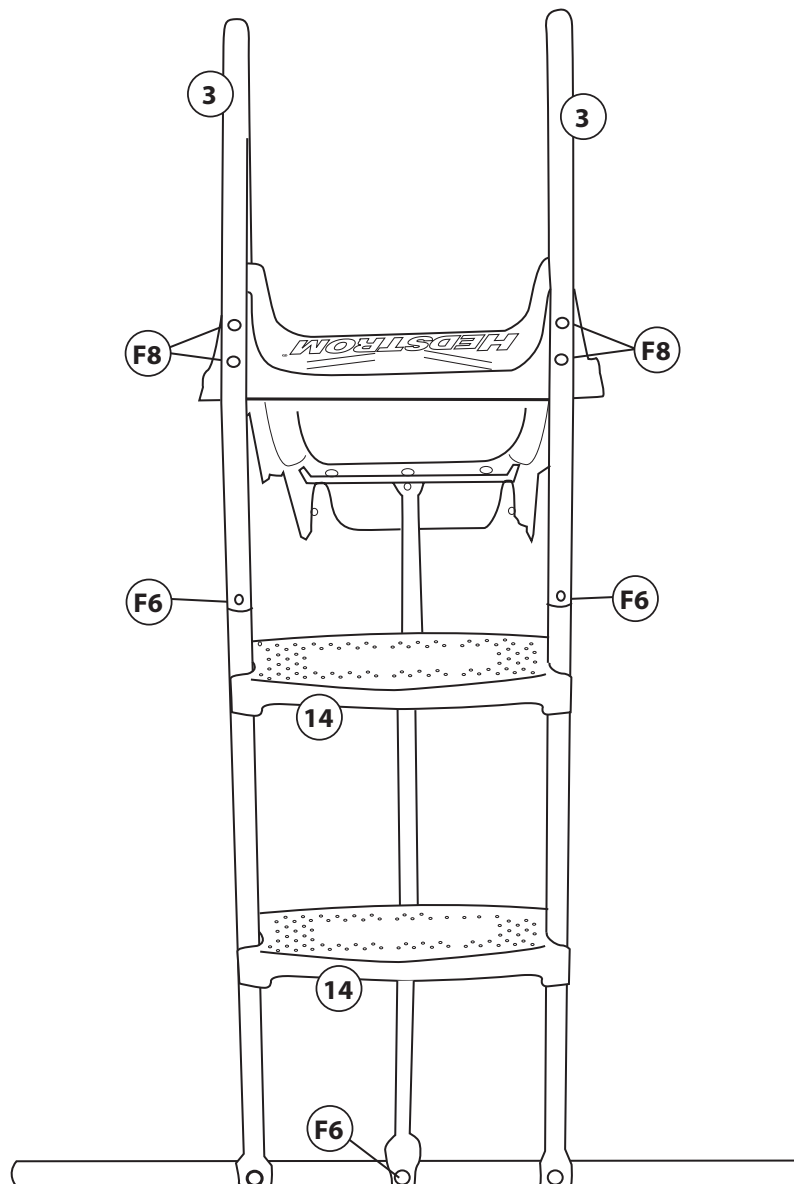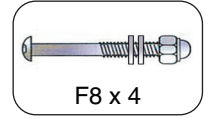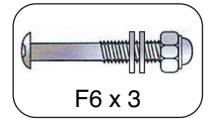



# Assembly Instructions (cont.)

## Step 7

Assembling of the slide

Insert Bolt F9 through Part 3, followed by Part 12 and finally Part 1

  Slide Assembly is now complete

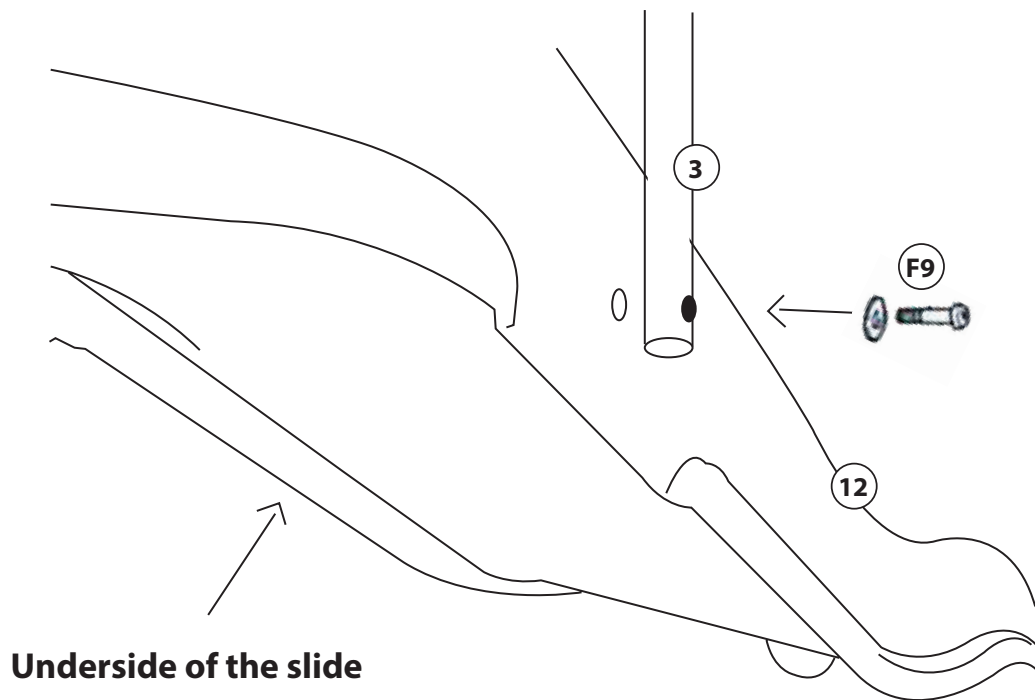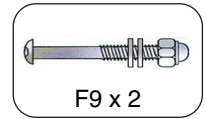

## Product maintenance and safety checks

- Carry out checks and maintenance of all main parts at regular intervals. Failure to do regular safety checks could result in product overturning or otherwise becoming a hazard.
- Check the sharp edges of all protective covers and bolts, and replace them if necessary.
- Check all parts for evidence of deterioration; replace when required.
- Polish rusty areas and tubular parts and repaint them with lead-free paint if necessary.

**NOTE:** If you have any problems by this stage, please do not try to install the slide and call our National Service Centre 1300 777 137

# Warranty Information

---

## Congratulations on your purchase!

This **Fun Slide** is warranted to be free from defects in material and workmanship under normal use and service conditions for a period of **12 months**, from the date of purchase of this article. Evidence of unfair usage or incorrect adjustment by the owner will void this promise.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits conferred by this warranty are in addition to the consumer guarantees and other rights and remedies in respect of the product which the consumer has under the Australian Consumer Law.

## Conditions of Warranty

All warranty coverage extends only to the original retail purchaser from the date of purchase. Please keep your receipt, tax invoice or other proof of purchase.

This warranty does not extend to any damage to a product caused by abuse, improper or abnormal usage, or repairs not provided by us or our National Service Centre. Nor does this warranty extend to products used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning, heavy winds and by snow or ice).

## Making A Warranty Claim

In order to make a claim under this warranty please direct your enquiries to our National Service Centre. You can contact them on our **Freecall 1300 777 137** number or send mail to them at National Service Centre: 48B Egerton Street, Silverwater, NSW 2128 – if mailing please include your contact details.

A service representative will then assist you in the appropriate action to be taken. For efficient processing of your enquiry please have proof of purchase, the date of purchase, the retailer name you purchased the item from, and the brand on the product. Photos of the product, and scans of receipts, may be requested to assist with your claim.

# Warranty Information (cont.)

---

The National Sales and Service Centre representative will assess the claim. If:

- 1) **There is a minor fault**, they can offer either a replacement spare part, replacement unit, repair or other suitable remedy.
- 2) **There is a major fault**, they can offer a replacement, repair or suggest you return to the store you purchased it from for a full refund.

**PLEASE NOTE:** a request for compensation will need documentary evidence of the loss or damage suffered. It will also need to be evidenced that such a loss was a reasonably foreseeable result of a failure to comply with a consumer guarantee under the Australian Consumer Law.

- 3) **The product was damaged through abnormal use**, no refund or repair can be offered.

The sending of replacements, spare parts or the cost of repair carried out will be organised and covered by the National Service Centre. If collection of the item is required this will be organised by the National Service Centre and at our expense. Do not return any products without authorisation as this will be at your expense.

Our National Sales and Service Centre has been set up to provide assembly assistance, replacement parts and accessories, and to efficiently handle all warranty related matters. Please note upon receiving your warranty claim our National Service Centre will send, via post or email, a repair and refurbished goods or parts notice.

## NATIONAL SERVICE CENTRE

**Contact details and hours of operation.**

**Freecall 1300 777 137**

9:00am – 4:30pm Monday to Friday (excluding Public Holidays)

9:00am – 3:00pm Saturday

**This product is warranted and distributed by:**

**Uncle Bills Australia of 48B Egerton St, Silverwater NSW, 2128**

**Phone: (02) 8799 3500**

© 2026 Uncle Bills Pty Ltd.

Version No: 2

Issue Date: 16 March 2026