



Spin N Slide Swing Set


S002592 / B02840K

Instruction Manual

ATTENTION!

SAFETY INFORMATION, INSTALLATION, CARE AND MAINTENANCE INSTRUCTIONS

READ PRIOR TO ASSEMBLING AND USING THE SWING SET

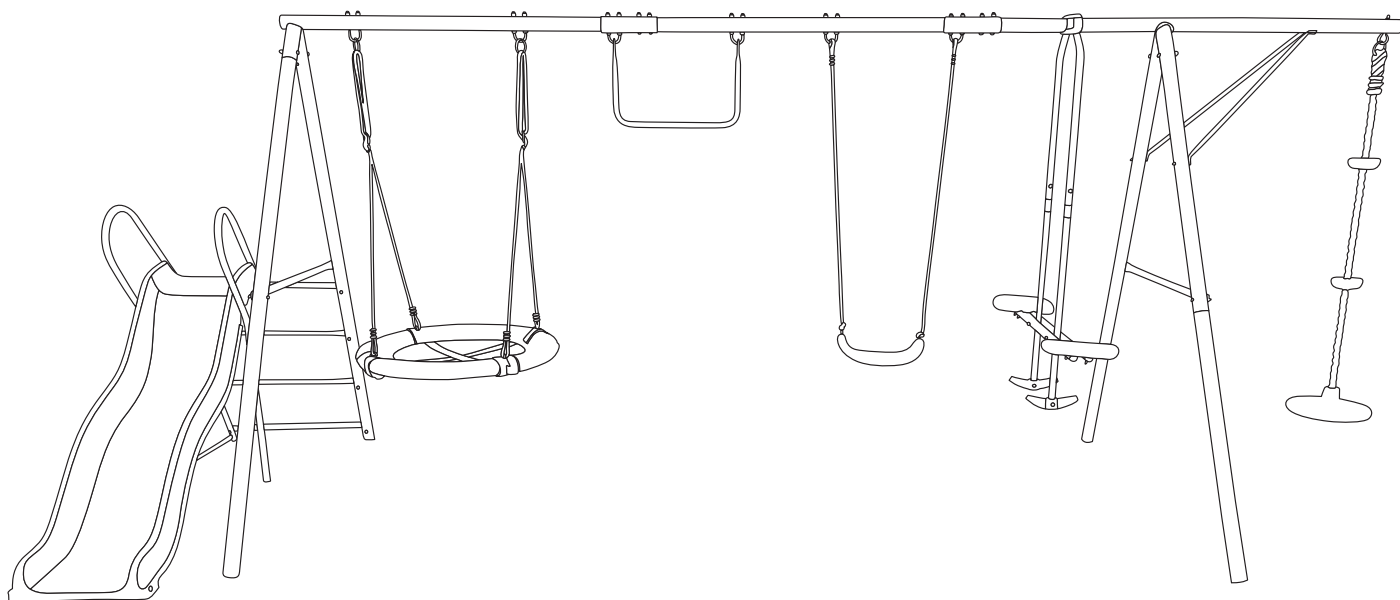

WARNING: To ensure everyone's safety, please do not attempt to assemble this swing set without reading this instruction manual carefully. Failure to comply with this warning may result in injury and/or property damage.

- Prior to assembly, this swing set includes small parts/accessories that are not suitable for children under 3 years of age as they may cause a choking hazard.
- This swing set should be assembled by 2 adults.
- Only use this swing set on a soft, flat level surface
- **This swing set has a maximum user weight of 45kg per unit/seat. The total weight on the swing set at any time must not exceed 270kg.**
- **Only one child per seat at any time.**
- This swing set is suitable for children 3-9 years of age.
- This swing set is designed for outdoor domestic use only, it is not intended for commercial use in play centres, nurseries, etc.

For parts and service enquiries, please contact our National Service Centre on 1300 777 137 or e-mail service@unclebill.com.au

Online Product
Information
Available Here



Contents



 

 

 





 

 



- 3 Important Safety Information
- 4 Parts List
- 6 Slide Parts List
- 7 Hardware List
- 8 Assembly Instructions
- 20 Product Safety Checks And Maintenance
- 21 Warranty Information

Important Safety Information

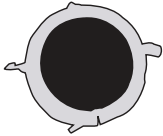

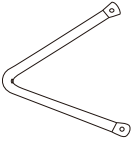
To reduce the risk of serious injury, read the entire manual before you assemble or use this swing set. In particular, please note the following safety precautions. Please keep this manual in a safe place for future reference. Failure to assemble and maintain this product correctly may cause injury to the user.



1. Prior to assembly, this swing set includes small parts/accessories that are not suitable for children under 3 years of age as they may cause a choking hazard.
2. This swing set should be assembled by 2 adults.
3. This swing set is designed for domestic use only, it is not intended for commercial use in play centres, nurseries, etc.
4. This swing set is designed for use by children 3-9 years of age.
5. This swing set has a maximum user weight of 45kg per seat, totalling 270kg across the entirety of the swing set.
6. Do not install this product over concrete, asphalt or any other hard surface.
7. Do not orientate the swing set directly towards the sun.
8. There should be at least 2m of space surrounding the swing set from any structure of obstruction such as a fence, garage, house, wall, overhanging branches, laundry lines, electrical wires, etc.
9. Regularly check the swing set for wear and damage, replace any worn or damaged parts immediately. Remove the swing set from use until replacement parts are fitted. Check all hardware regularly and tighten when required.
10. Do not overtighten the nuts and bolts. Use hand tools only, do not use power tools as this can weaken the connection points.
11. The minimum distance between any swing and the ground is 35cm.
12. Swings must not exceed an angle of 60° from the ground.
13. Children must be supervised by an adult at all times when the swing set is in use.
14. Only one child should use the swing at any time.
15. Do not stand on the seats when using the swing set.
16. Do not use the swing set when it is wet as it will become slippery and serious injury may result.
17. Do not climb on or jump from the swing set when it is in motion.
18. Do not climb or hang on the frame of the swing set.
19. Do not allow additional foreign objects to be attached or used with the swing set.
20. Do not walk close to, in front of or behind the swing set when in use as moving units can cause serious injury.
21. Do not wear apparel such as hats with straps, helmets, scarves, garments with pull strings or any other item of loose clothing while using the swing set as children can get trapped and may be unable to free themselves causing serious injury.
22. Do not twist swing ropes or wrap them over the top bar.
23. Anchors shall be placed level with or under the ground in order to reduce tripping hazards.
24. The maximum fall height for this overall product is 182cm.
The maximum fall height for the slide is 81cm.

Parts List



 

 

 
 


Part No.	Description	Qty	Part No.	Description	Qty
1	 Top Bar A	1	10	 Glider Seat Tube	2
2	 Top Bar B	1	11	 Nest Swing Fabric	1
3	 Top Leg	2	12	 Swing Seat	2
4	 Top Bar C	1	13	 Glider Footrest	2
5	 Bottom Leg A	3	15	 Side Stay Bar	1
6	 Side Stay Bar	1	16	 Swing Seat	1
7	 Glider Bracket	1	18	 Bottom Leg B	1
8	 Glider Handle Tube	1	38	 Top Leg	2
9	 Glider Leg	2	39	 Top Leg	2




 
 




Parts List (cont.)

Part No.	Description	Qty
40	 Disk with Rope	1
43	 Nest Swing Rope	2
51	 Bracket	4

 





 













 
 
 

 
 
Part No.	Description	Qty
41	 Nest Swing Frame with Foam Padding	4
46	 Trapeze	1

Slide Parts List

Part No.	Description	Qty
19	 Top Ladder Rung	1
20	 Chute Side Stay Bar	1
21	 2nd Ladder Rung	1
22	 3rd Ladder Rung	1
23	 Bottom Ladder Rung	1
24	 Ladder Leg	1
25	 Ladder Handle	2
26	 Ladder Handle	2
27	 Lower Support Tube	2
28	 Ladder Handle	1

Part No.	Description	Qty
29	 Support Strap	2
30	 Support Strap	1
31	 Support Strap	1
32	 Upper Slide	1
33	 Lower Slide	1
34	 Connector	4
35	 Ground Peg	5
36	 Upper Support Tube	2
50	 Support Strap	1

Hardware List

Part No.	Description	Qty	Part No.	Description	Qty
F1a	 M6x20mm Bolt	6	C14	 M8x62mm Bolt	4
F1b	 M6x17mm Bolt	3	G1	 M6x47mm Bolt	2
F2	 M8x59mm Bolt	6	G2	 M8x43mm Bolt	2
F2a	 M6x14mm Bolt	2	G4	 M8x83mm Bolt	2
F3	 M6x35mm Bolt	10	G5	 M6x42mm Bolt	2
F4	 M6x63mm Bolt	6	G6	 M6x38mm Bolt	8
C1	 M6x60mm Bolt	2	G7	 M6x72mm Bolt	1
C2	 M6x63mm Bolt	4	G8	 Thin Plastic Spacer	4
C3	 M6x40mm Bolt	3	G9	 Thick Plastic Spacer	4
C4	 M6x40mm Bolt	3	G10	 M6x35mm Bolt	4
C5	 M6x58mm Bolt	2	S1	 M8 U Bolt	7
C6	 M6x62mm Bolt	4		 Spanner	1
C8	 M6x66mm Bolt	4		 Allen Key	1

Note: Some parts may be supplied pre-assembled.

Ruler - Use this ruler to help correctly identify the hardware



Assembly Instructions


Prior to assembling this swing set, remove all parts from the carton and check to ensure that all parts listed in the Parts List and Hardware List (on pages 4-6) are present. If you're missing any of the parts, please call our National Service Centre to have replacement parts sent out prior to beginning assembly (details can be found in the warranty pages at the end of this manual).

Note: It is recommended that 2 adults assemble this swing set.

Step 1

Align Top Bar A (1), Top Bar B (2) and Top Bar C (4), secure with Brackets (7). Use M8x62mm Bolt (F1) as shown below in image, adding the swing seats and trapeze to the U-bolts before connecting. F1 bolts only secure the centre bar as the U-Bolts for trapeze and swing will secure the rest of the top bar.

Note: Remember to attach the rope/swing bearing to the U-bolts.

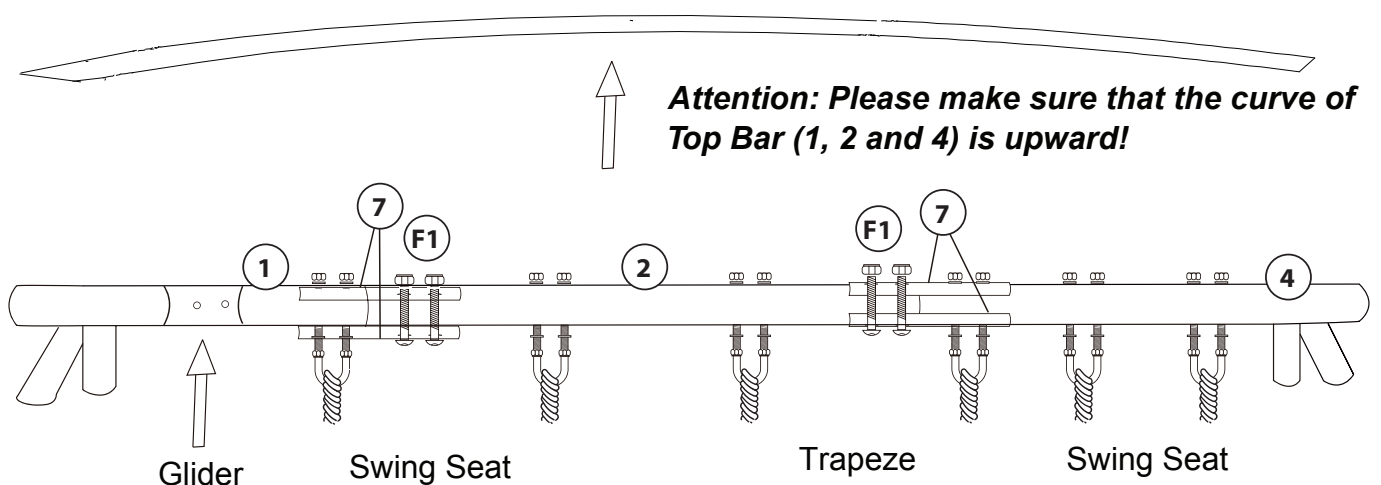

Note: Do not fully tighten all the bolts before full assembly.



Assembly Instructions (cont.)

Step 2

Insert Top Legs (3) into Top Bar A (1) and secure using M8x53mm Bolts (F2).

Insert Top Legs (3) into Top Bar C (4) and secure using M8x53mm Bolts (F2).

Secure Ball Ring (21) to the end of Top Bar C (4) and secure using M6x14mm Bolts (F10), as shown.

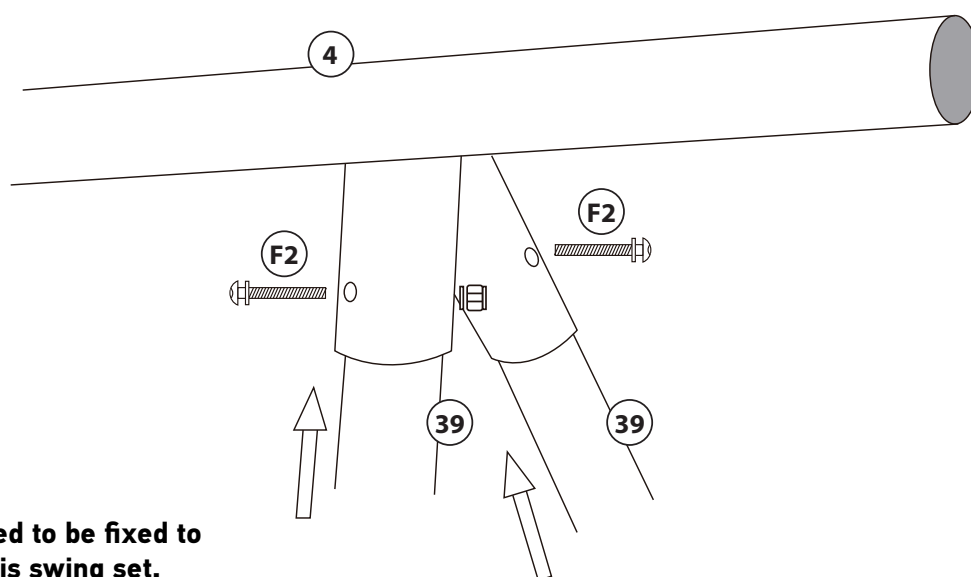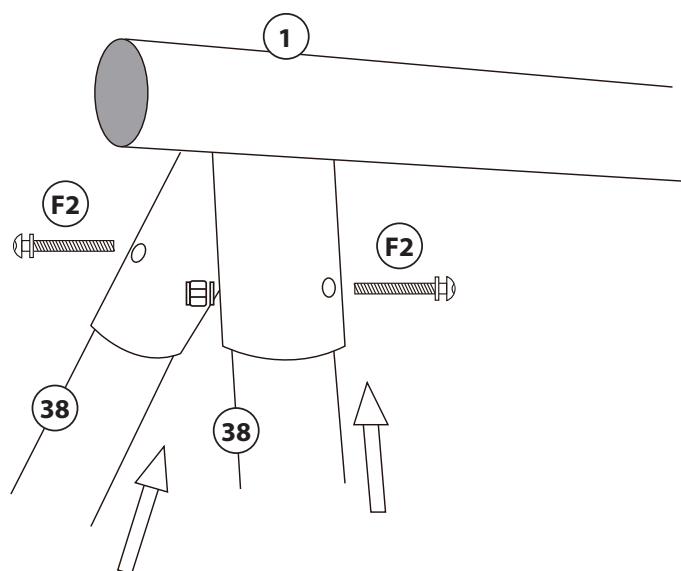

WARNING: BALL RING

This ball ring is not designed to be fixed to any structure other than this swing set. In particular, it must not be fixed to any form of brickwork. Consult a structural engineer if fixing to some structure other than as described in these instructions.

Assembly Instructions (cont.)


Step 3

Insert Bottom Legs (5) into Top Leg (3), as shown.


Connect Side Bar A (6) and Side Bar B (18) to connected legs. Secure using M6x52mm Bolts (F5). Please make sure that Side Bar A (6) is assembled at the side of Netball Ring (21). Side Bar B (18) is assembled at opposite end.

Attach Swing Seat (12) using M8 U-bolts x 4 (S1).

Attach Trapeze (14) using M8 U-bolts x 2 (S1).

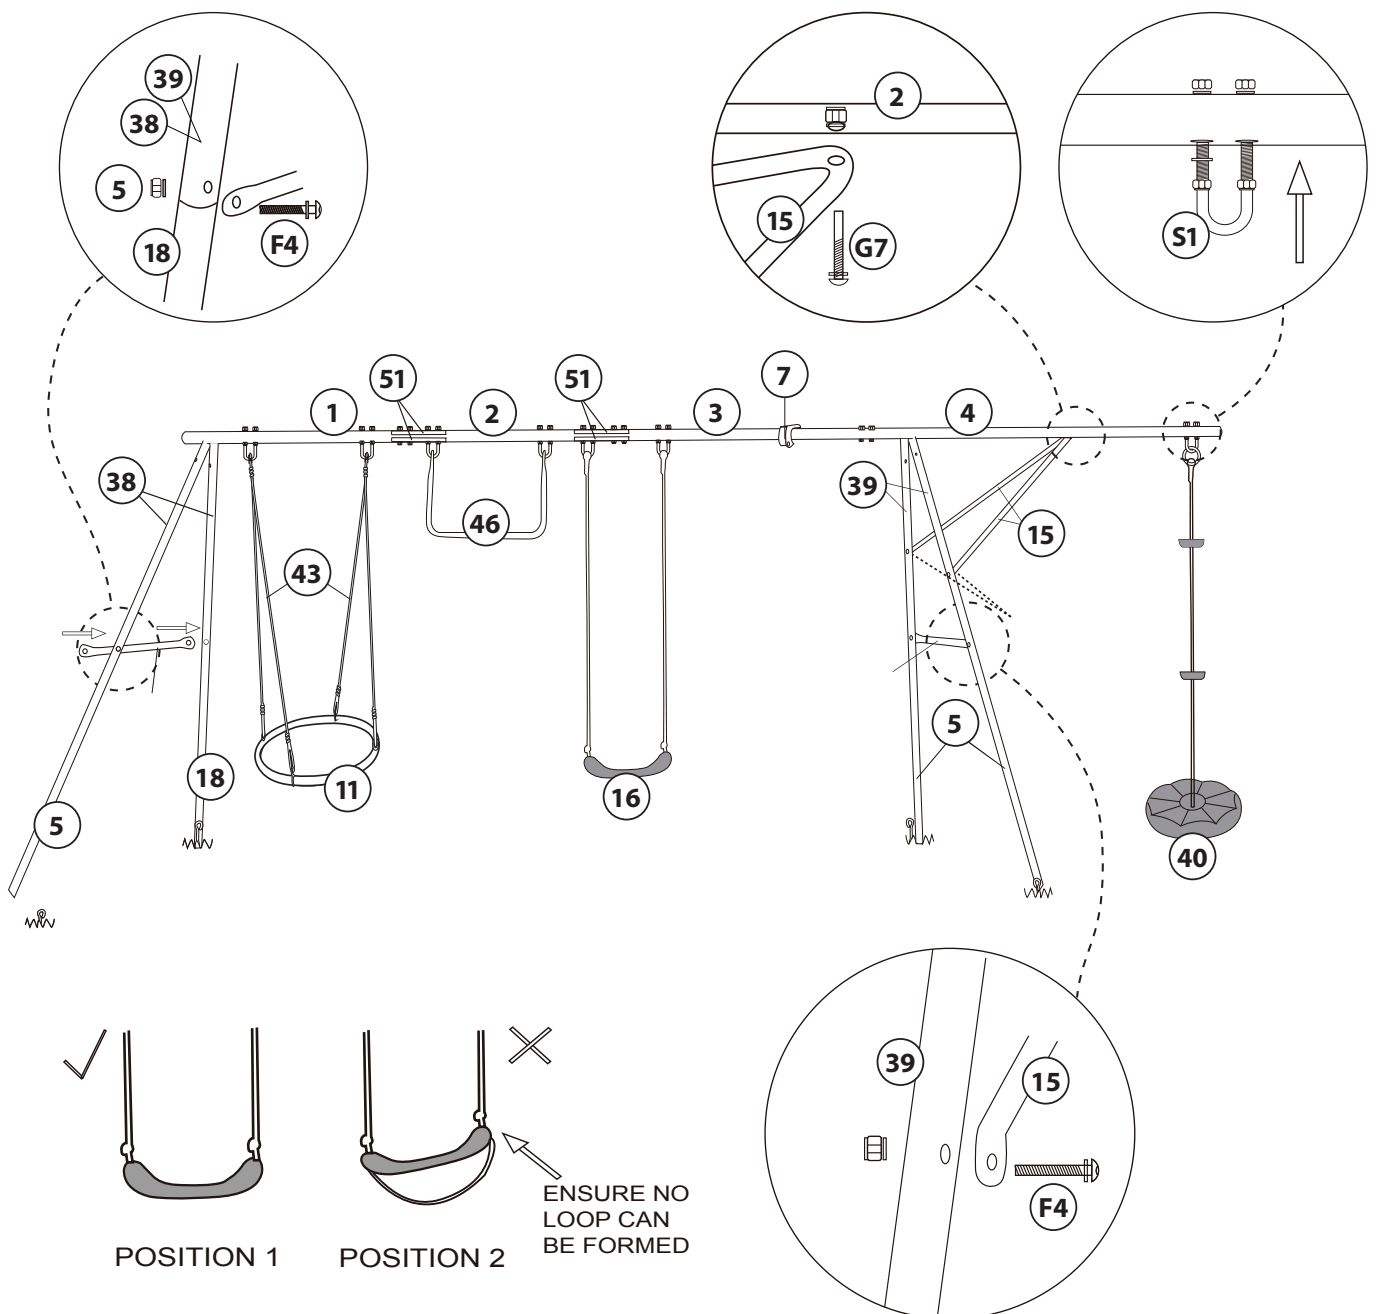

Assembly Instructions (cont.)


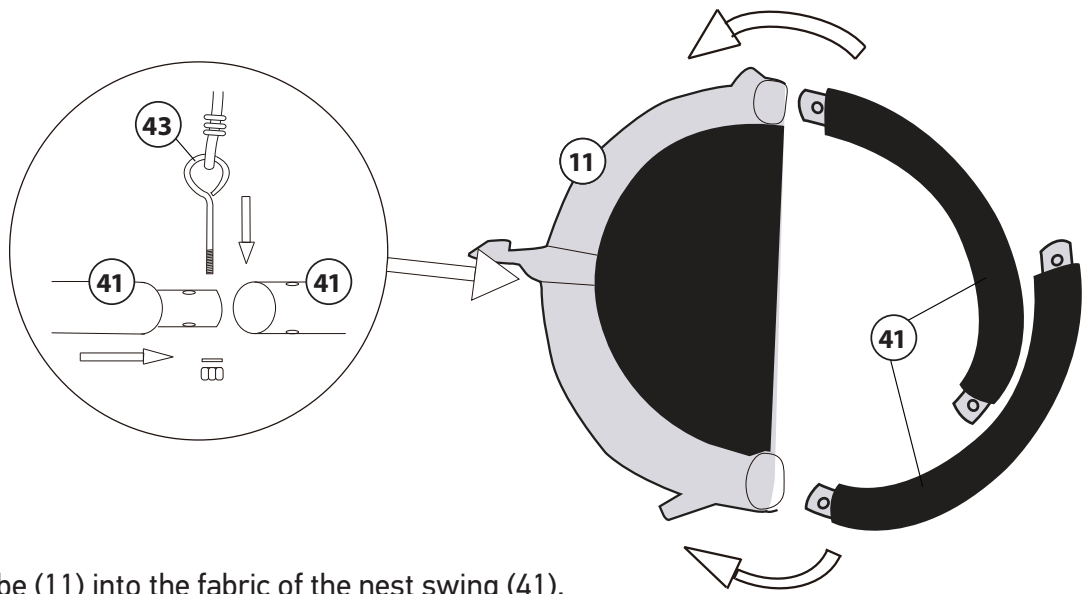


Step 4


Insert the metal tube (11) into the fabric of the nest swing (41).

Join the metal tubes together and then fasten them by using the bolt at the end of the rope (43). (See Picture 1)

Repeat this for the other side, and then the nest swing becomes two semicircles. (See Picture 2)

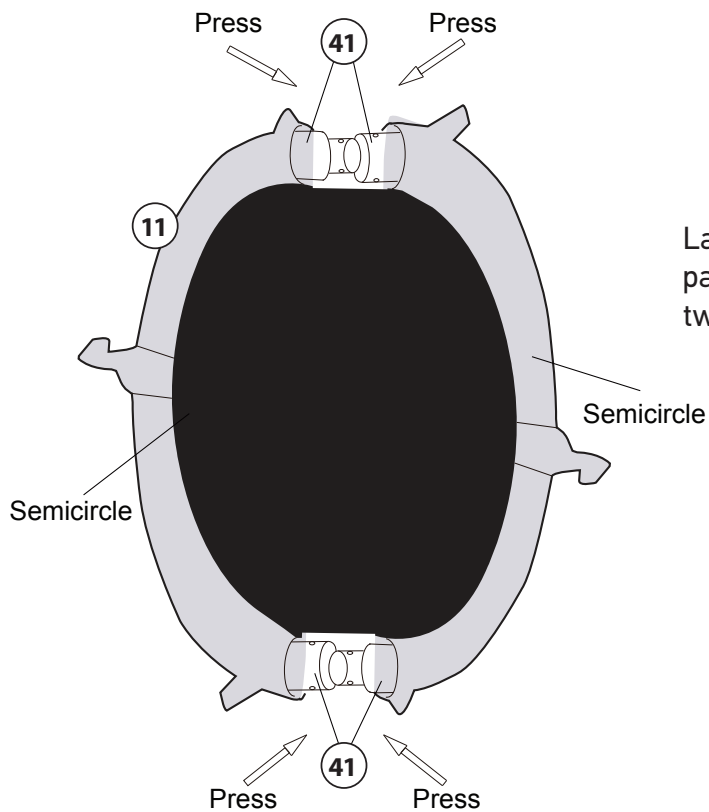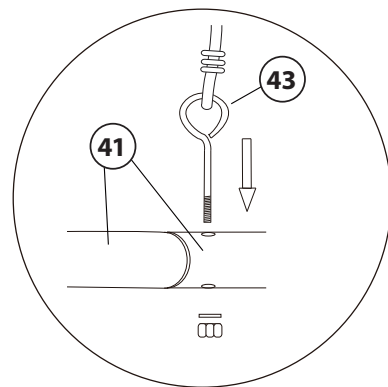

Lay the two semicircles on the ground, join the two part tubes together, and then press it down so that two parts are joined together as a circle.

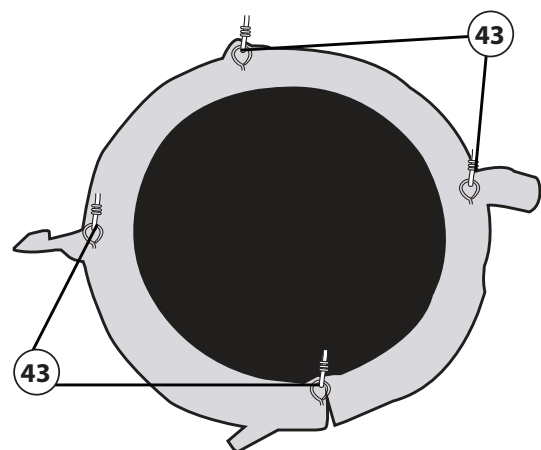


Assembly Instructions (cont.)


Step 5

Attach the Glider Bracket (16) to Top Bar A (1) and secure using M6x47mm Bolt (G1).

Insert Glider Handle Tube (8) into Glider Bracket (16) and secure using Thin Plastic Spacer (G8) and M8x43mm Bolts (G2).

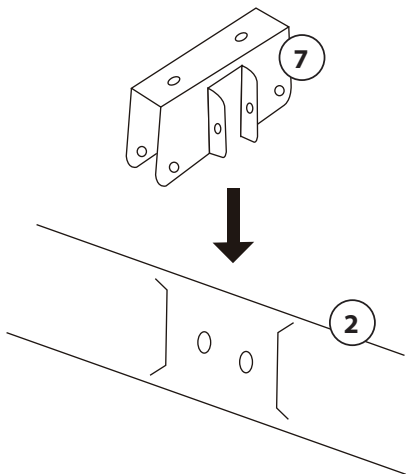


Repeat this for the other side

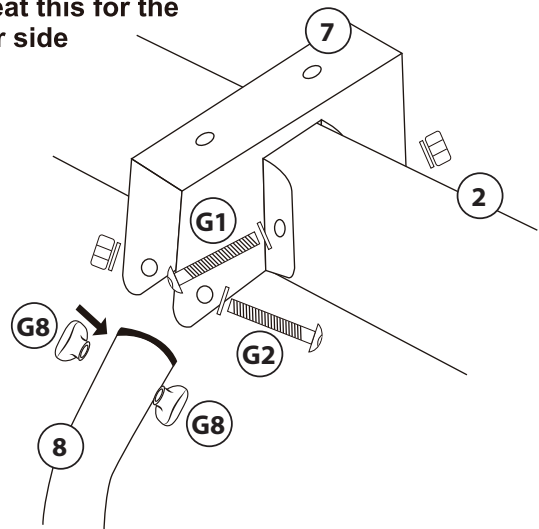

Step 5

Insert Glider Legs (9) into Glider Handle Tube (8). Secure using M6x35mm Bolts (G6).

Note: Ensure nuts face inwards (see diagram).

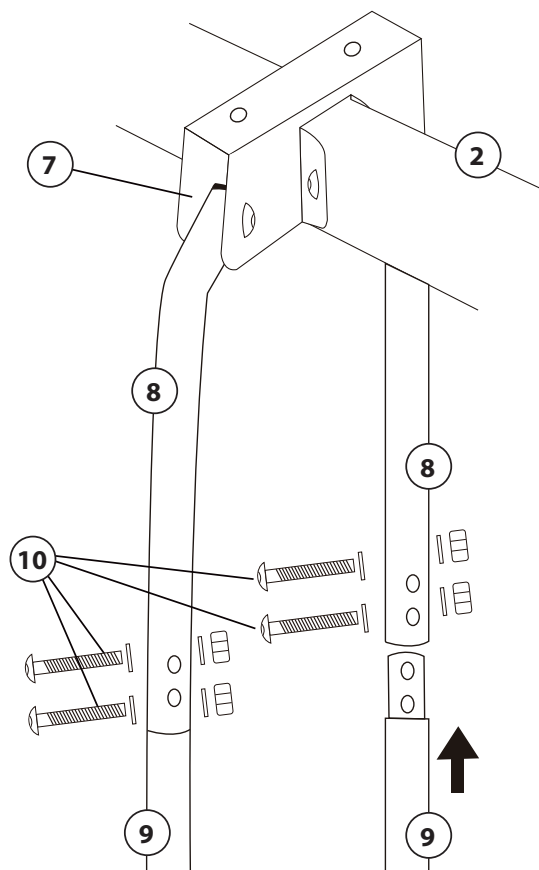

Assembly Instructions (cont.)


Step 6

Attach Glider Seat Tubes (10) to Glider Legs (9) on either side through Thick Plastic Spacer (G9), ensuring spacers are facing the glider leg pole. Secure using M8x83mm Bolts (G4).

Attach Glider Seats (12) to Glider Seat Tube (10) using M6x38mm Bolts (G6). Ensure the nut is facing down and the bolt is not protruding out, it should sit in the hole or flush to the hole.

Attach Glider Footrests (13) to Glider Legs (9) and secure using M6x47mm Bolts (G5).


Note: Ensure nuts face inwards for both footrests (see diagram).

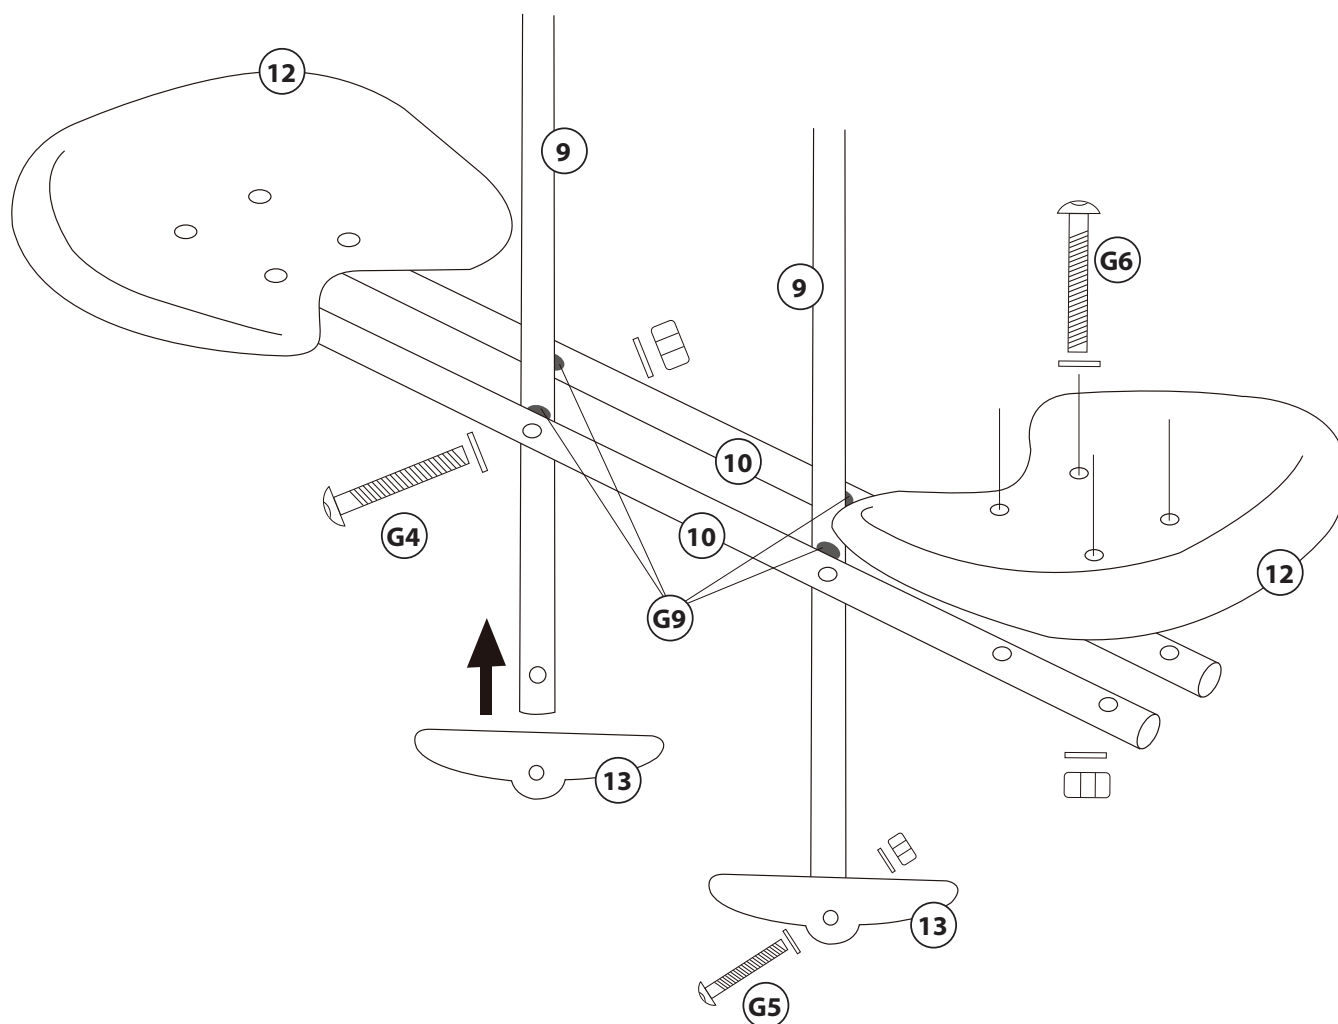


Assembly Instructions (cont.)

Step 7

Push Slide Top Support Bar (X4-N) into receiving location at the top of the Slide (Y2), centering so it's leveled on both sides

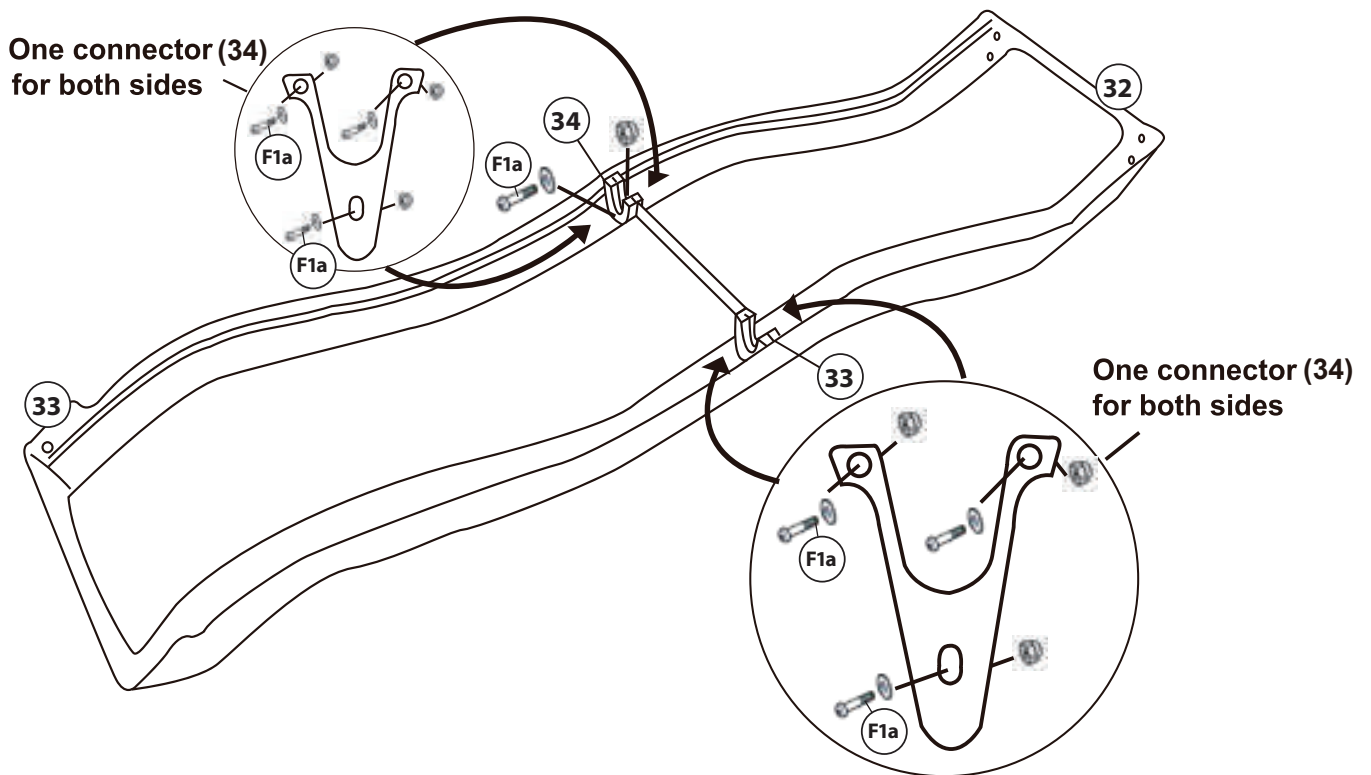

Attach Slide Front Support (X5-N) at the base of Slide (Y2).
Secure using 6x58mm Bolts (Z8), Spring Washers small (Z6)
and Cap Bolts 6mm (Z4), as shown

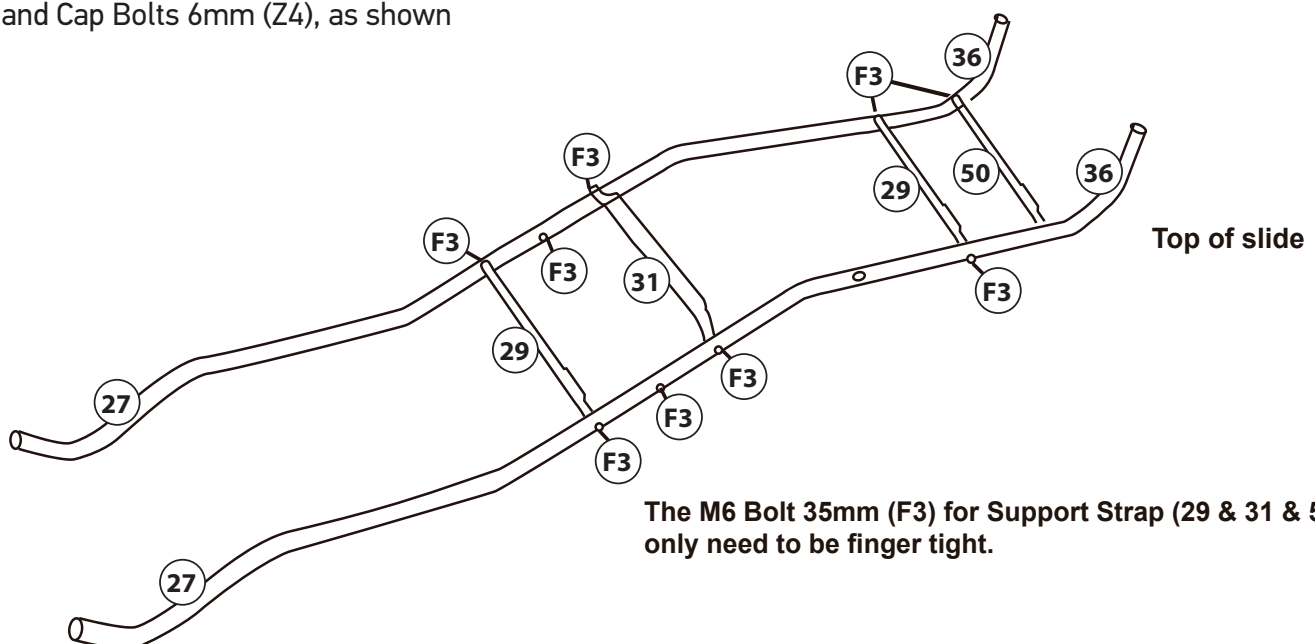


Assembly Instructions (cont.)

Step 8

Fix Slide Support (X1-N) and (X2-N) to Slide Ladder Steps (X6) using 6x34mm Bolts (Z1), Spring Washers small (Z6) and Cap Nuts 6mm (Z4), as shown.

Insert Slide Leg Tubes (X3-N) into Slide Supports (X1-N) and (X2-N).

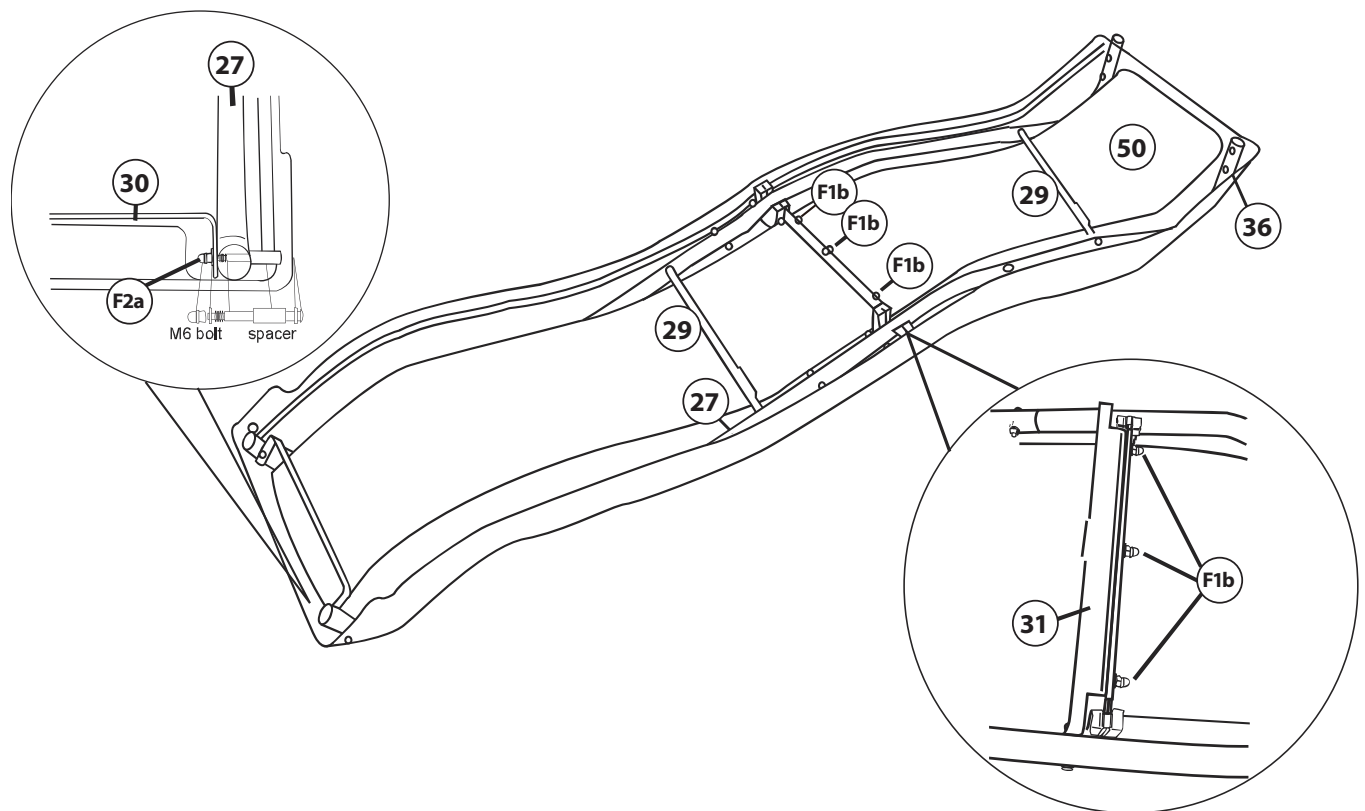


Assembly Instructions (cont.)

Step 9

Connect assembled metal frame to the assembled Slide (Y2).

Secure using 6x38mm Bolts (Z1-1), 6x115mm Bolts (Z2), Spring Washer (large) (Z3), Cap Nut 6mm (Z4), Cap Bolt 6x12mm (Z5) and Spring Washer (small) (Z6), as shown.

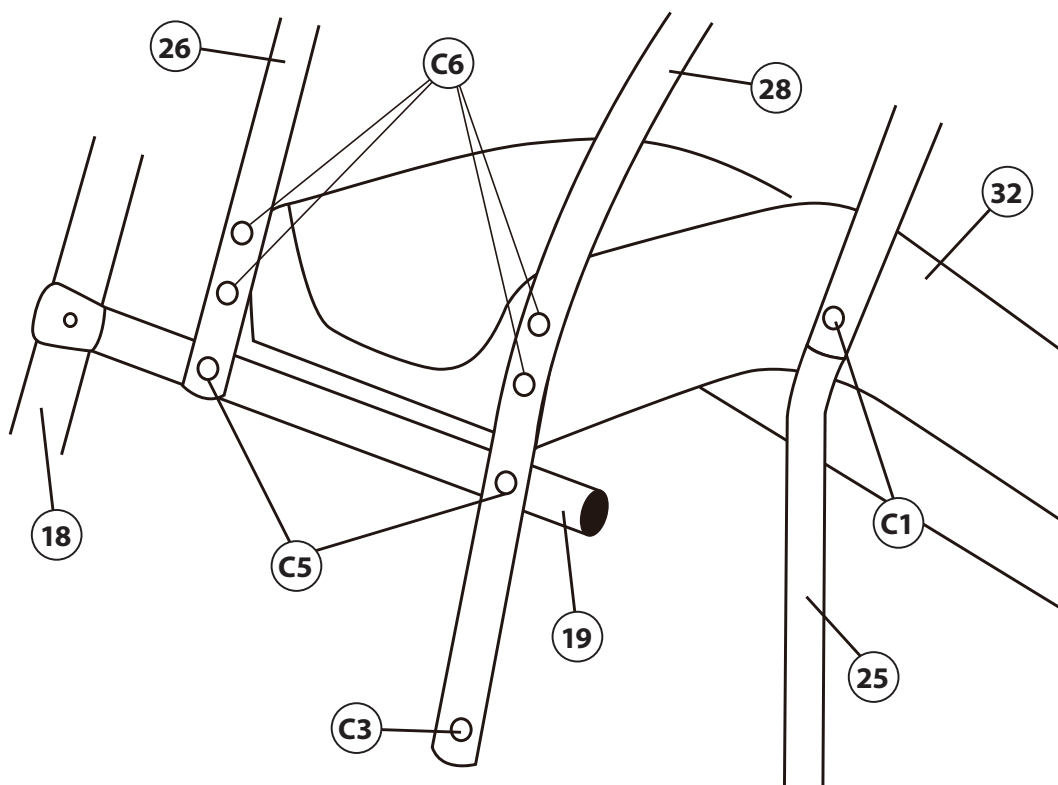


Assembly Instructions (cont.)

Step 11

Using Plastic Connectors (Y1), connect the assembled slide to the main frame Side Bar B (18).

Secure using Spring Washers large (Z3), Cap Bolts 6x12mm (Z5), Spring Washers small (Z6) and 6x76mm Bolts (Z7), as shown.



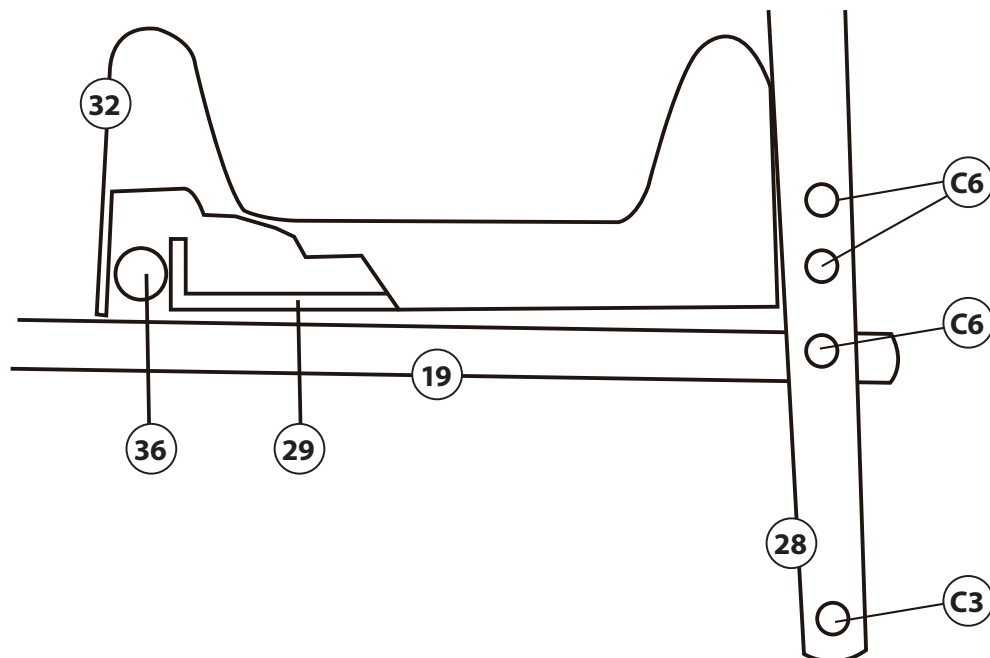


Assembly Instructions (cont.)


Step 11

Warning: For safety reasons this swing set MUST be anchored into the ground. To carry out this procedure you must hammer the included Ground Pegs into the ground at the angle shown in the picture above. The Ground Pegs must pull into hard earth and hold firmly. We highly recommend that the Ground Pegs be concreted but this is optional. However, if the ground is soft and the Ground Pegs can easily be pulled out by hand once installed then concreting is essential. Contact our Service Centre for more information if you are unsure regarding the installation of the Ground Pegs.

Anchors shall be placed level with or under the ground in order to reduce tripping hazards.

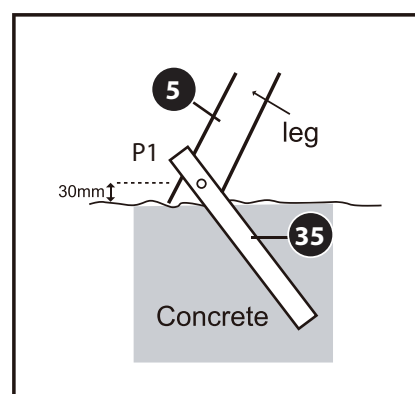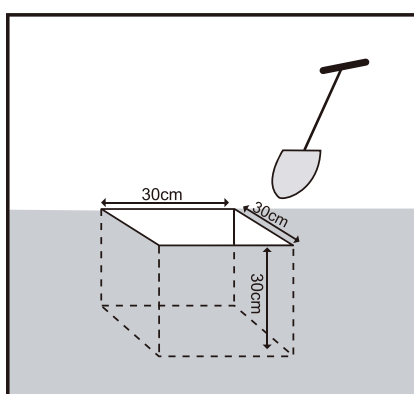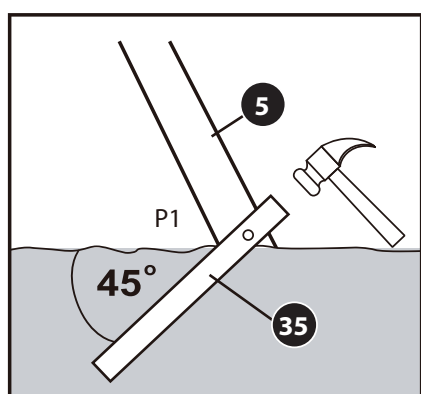

Once assembly is completed, carefully check equipment. In the unlikely event that you do find any problems, please contact us. DO NOT allow children to use this product until the problem has been corrected.

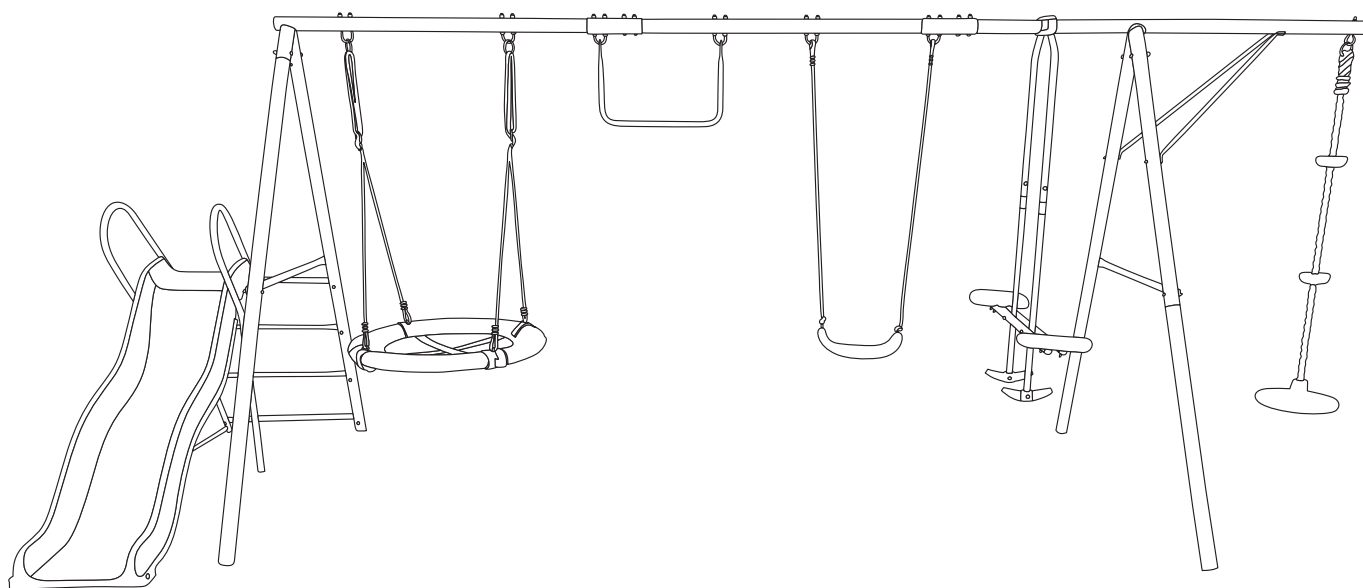

Product Safety Checks And Maintenance

Carry out checks and maintenance of the main parts at regular intervals. If these checks are not carried out, the toy could overturn or otherwise become a hazard.

Check the sharp edges of all protective covers and bolts, and replace them if necessary.

Check anchors are in place, and level with or under the ground to reduce tripping hazards.

Polish rusty areas and tubular parts and repaint them with lead-free paint if necessary.

Warranty Information

Congratulations on your purchase!

This **Spin N Slide Swing Set** is warranted to be free from defects in material and workmanship under normal use and service conditions for a period of **12 months**, from the date of purchase of this article. Evidence of unfair usage or incorrect adjustment by the owner will void this promise.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits conferred by this warranty are in addition to the consumer guarantees and other rights and remedies in respect of the product which the consumer has under the Australian Consumer Law.

Conditions of Warranty

All warranty coverage extends only to the original retail purchaser from the date of purchase. Please keep your receipt, tax invoice or other proof of purchase.

This warranty does not extend to any damage to a product caused by abuse, improper or abnormal usage, or repairs not provided by us or our National Service Centre. Nor does this warranty extend to products used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning, heavy winds and by snow or ice).

Making A Warranty Claim

In order to make a claim under this warranty please direct your enquiries to our National Service Centre. You can contact them on our **Freecall 1300 777 137** number or send mail to them at National Service Centre: 48B Egerton Street, Silverwater, NSW 2128 – if mailing please include your contact details.

A service representative will then assist you in the appropriate action to be taken. For efficient processing of your enquiry please have proof of purchase, the date of purchase, the retailer name you purchased the item from, and the brand on the product. Photos of the product, and scans of receipts, may be requested to assist with your claim.

Warranty Information (cont)

The National Sales and Service Centre representative will assess the claim. If:

- 1) **There is a minor fault**, they can offer either a replacement spare part, replacement unit, repair or other suitable remedy.
- 2) **There is a major fault**, they can offer a replacement, repair or suggest you return to the store you purchased it from for a full refund.

Please NOTE: a request for compensation will need documentary evidence of the loss or damage suffered. It will also need to be evidenced that such a loss was a reasonably foreseeable result of a failure to comply with a consumer guarantee under the Australian Consumer Law.

- 3) **The product was damaged through abnormal use**, no refund or repair can be offered.

The sending of replacements, spare parts or the cost of repair carried out will be organised and covered by the National Service Centre. If collection of the item is required this will be organised by the National Service Centre and at our expense. Do not return any products without authorisation as this will be at your expense.

Our National Sales and Service Centre has been set up to provide assembly assistance, replacement parts and accessories, and to efficiently handle all warranty related matters. Please note upon receiving your warranty claim our National Service Centre will send, via post or email, a repair and refurbished goods or parts notice.

NATIONAL SERVICE CENTRE

Contact details and hours of operation.

Freecall 1300 777 137

9:00am – 4:30pm Monday to Friday (excluding Public Holidays)

9:00am – 3:00pm Saturday

This product is warranted and distributed by:

Uncle Bills Australia of 48B Egerton St, Silverwater NSW, 2128

Phone: (02) 8799 3500

© 2026 Uncle Bills Pty Ltd.

Version No: 2

Issue Date: 16 March 2026