



# Active Climber


S002593 / B02857

Instruction Manual

## ATTENTION!

SAFETY INFORMATION, INSTALLATION, CARE AND MAINTENANCE INSTRUCTIONS

READ PRIOR TO ASSEMBLING AND USING THE CLIMBING DOME

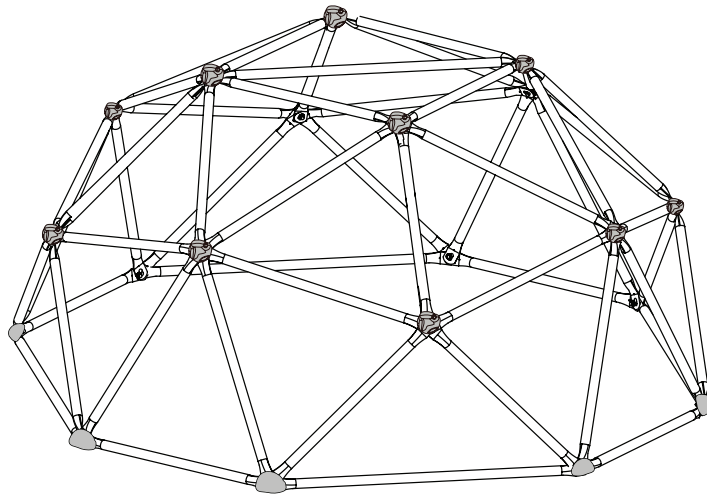

**WARNING:** To ensure everyone's safety, please do not attempt to assemble this climbing dome without reading this instruction manual carefully. Failure to comply with this warning may result in injury and/or property damage.

- Prior to assembly, this climbing dome includes small parts/accessories that are not suitable for children under 3 years of age as they may cause a choking hazard.
- This climbing dome should be assembled by 2 adults.
- The climbing dome should be installed on a soft surface, such as lawn or woodchips. Never use the climbing dome on or over hard surfaces such as concrete or asphalt
- The climbing dome should be installed with a safe space of 2 metres around all of the structure. do not install near other backyard installations such as fences, pools, or other play equipment. Never use the climbing dome in conjunction with other play equipment, or attach any other items to the climbing dome.
- Use always under constant adult supervision, with no more than 3 children on the play structure at any one time.
- **This climbing dome is designed for use by children 3-9 years of age weighing no more than 45kg per child, total 135kg.**
- This climbing dome is designed for outdoor domestic use only, it is not intended for commercial use in play centres, nurseries etc.

For parts and service enquiries, please contact our National Service Centre on 1300 777 137 or e-mail [service@unclebills.com.au](mailto:service@unclebills.com.au)

Online Product  
Information  
Available Here



# Contents

---

- 3** Warnings
- 4** Parts List
- 5** Assembly Instructions
- 8** Warranty Information

 
 
 

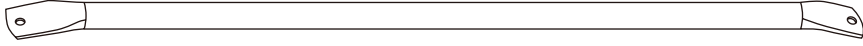 
# Important Safety Information







---

To reduce the risk of serious injury, read the entire manual before you assemble or use this climbing dome. In particular, please note the following safety precautions. Failure to assemble and maintain this product correctly may cause injury to the user.

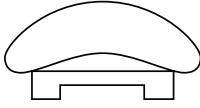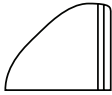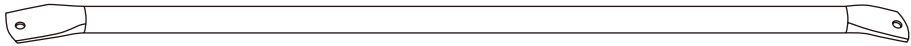 1. Prior to assembly, this climbing dome includes small parts/accessories that are not suitable for children under 3 years of age as they may cause a choking hazard.
2. This climbing dome is designed for domestic use only, it is not intended for commercial use in play centres, nurseries, etc.
- 3. This Active Climber is designed for use by children 3-9 years of age weighing no more than 45kg per child, total 135kg.**
4. Use always under constant adult supervision, with no more than 3 children on the play structure at any one time.
5. Place the climbing dome on a level surface before use. Do not install this product over concrete, asphalt or any other hard surface.
6. The climbing dome should be installed with a safe space of 2 metres around all of the structure. do not install near other backyard installations such as fences, pools, or other play equipment. Never use the climbing dome in conjunction with other play equipment, or attach any other items to the climbing dome.
7. Regularly check the climbing dome for wear and damage, replace any worn or damaged parts immediately. Remove the climbing dome from use until replacement parts are fitted. Check all hardware regularly and tighten when required.
8. Do not overtighten the nuts and bolts. Use hand tools only, do not use power tools as this can weaken the connection points.
9. Children must be supervised by an adult at all times when the climbing dome is in use.
10. Do not use the climbing dome when it is wet as it will become slippery and serious injury may result.
11. Do not climb on or jump from the climbing dome.
12. Do not allow additional foreign objects to be attached or used with the climbing dome.
13. Do not wear apparel such as hats with straps, helmets, scarves, garments with pull strings or any other item of loose clothing while using the climbing dome as children can get trapped and may be unable to free themselves causing serious injury.
14. The maximum fall height for this product is 90cm.
15. Retain the assembly and installation instructions for future reference.
16. Anchors should be placed level with or under the ground in order to reduce tripping hazards.
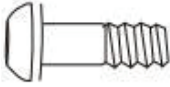
# Parts List

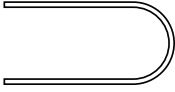 Part No.	Description	Qty
Cap A	Large Nodes 	12
Cap B	Small Nodes 	8
Tube A		5
Tube B		20
Tube C		24


Description	Qty
Bolt M8 38mm 	20
Flay Nut M8 	20
Washer 	20
Ground Peg 	4
Allen Key 	<b>1</b>
Spanner 	

# Assembly Instructions

## Step 1

Lay the round base using tubes A and B, and connect them together with bolts.

Do not fit nut at this stage.

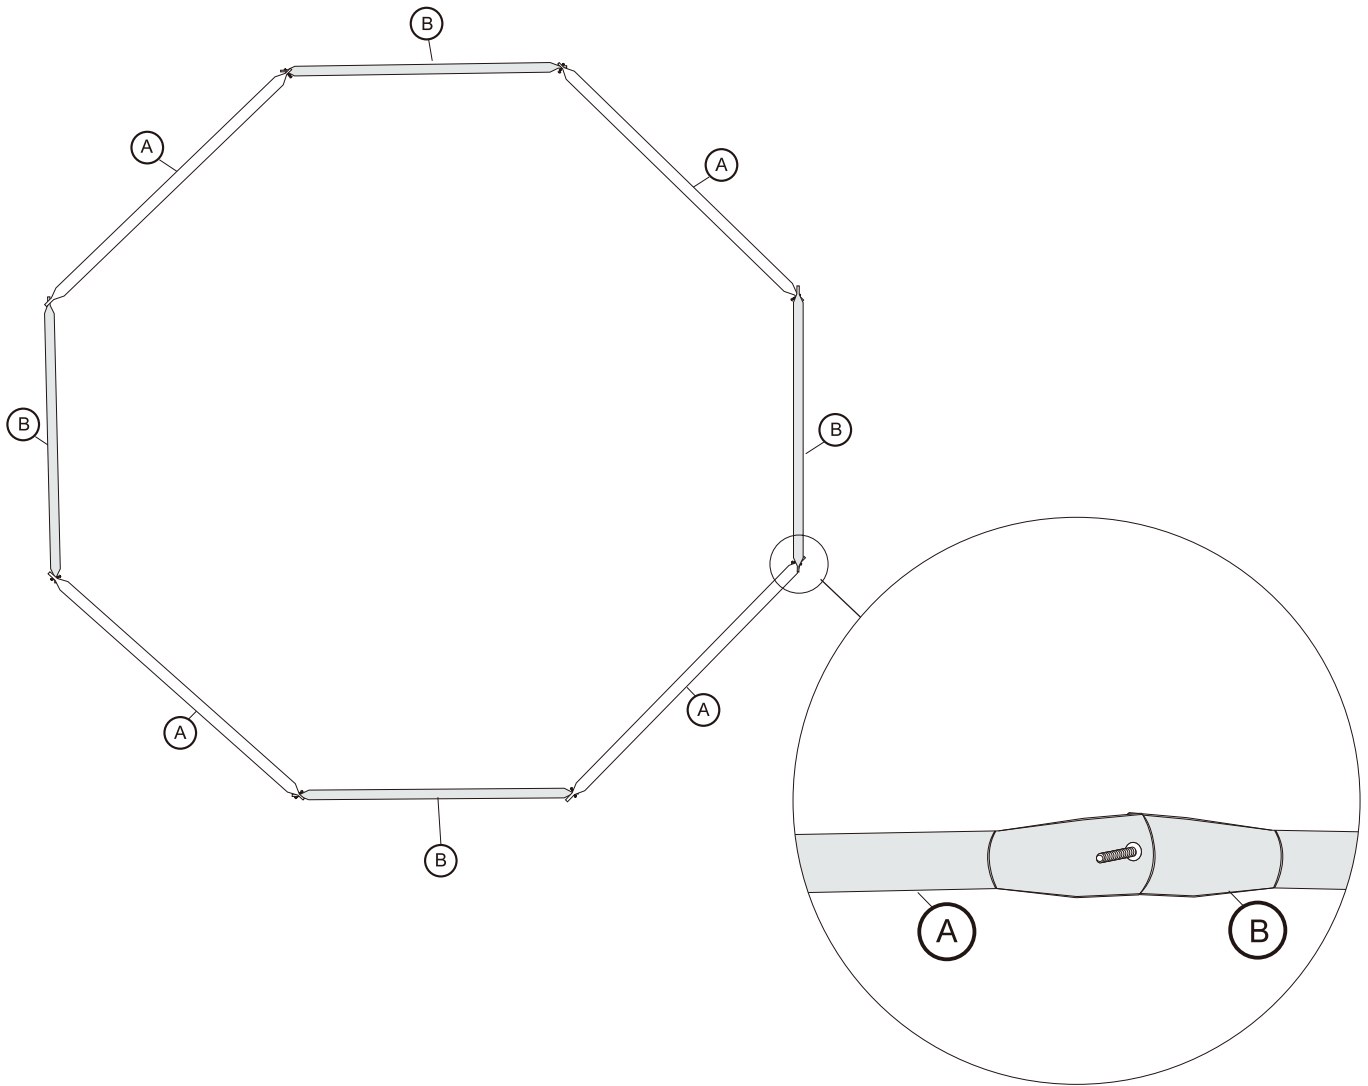


**NOTE:** The screws go through from the inside out. The convex side of the tube always faces inward of the dome.

**NOTE:** If you have any problems by this stage, please do not try to install the climbing dome and call our National Service Centre 1300 777 137.

# Assembly Instructions (cont)

## Step 2

Assemble as illustrated below. Use six pieces of Tube C to form a hexagon with one bolt and one flat nut. Repeat to form four hexagons.

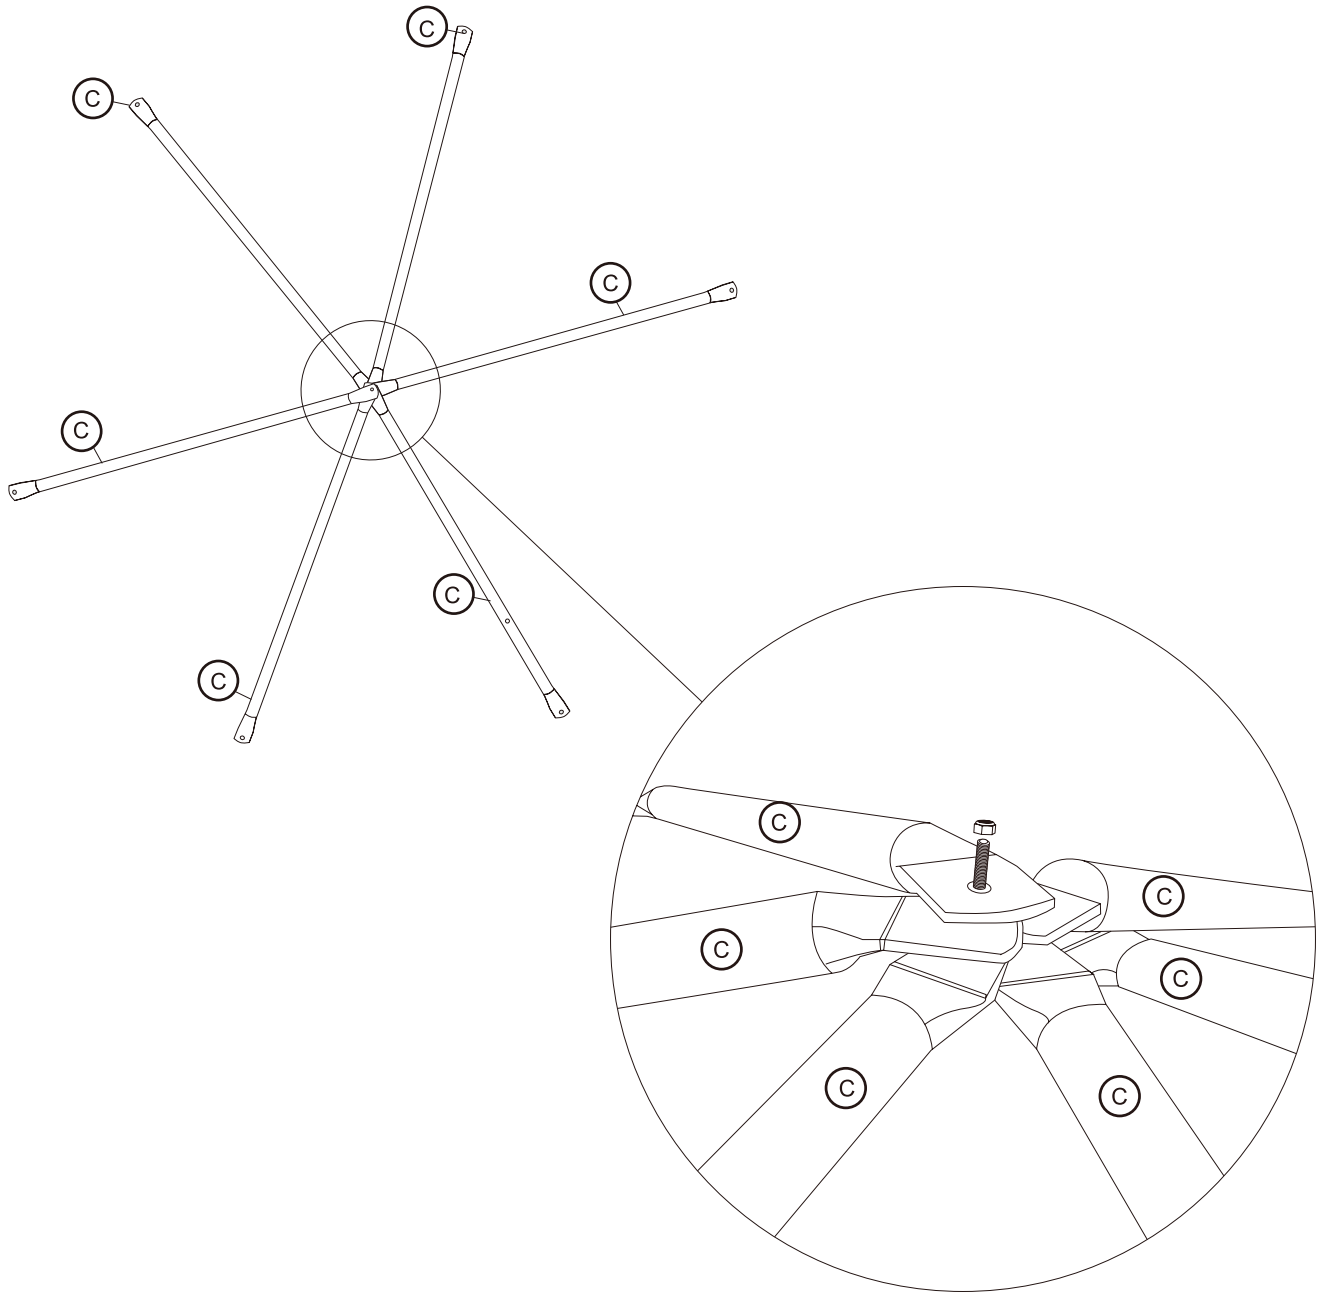


**NOTE:** The screws go through from the inside out. The convex side of the tube always faces inward of the dome.

# Assembly Instructions (cont)

## Step 3

Join two tube C from one hexagon to tube B on the base using bolt.

Do not fix with nut at this stage.

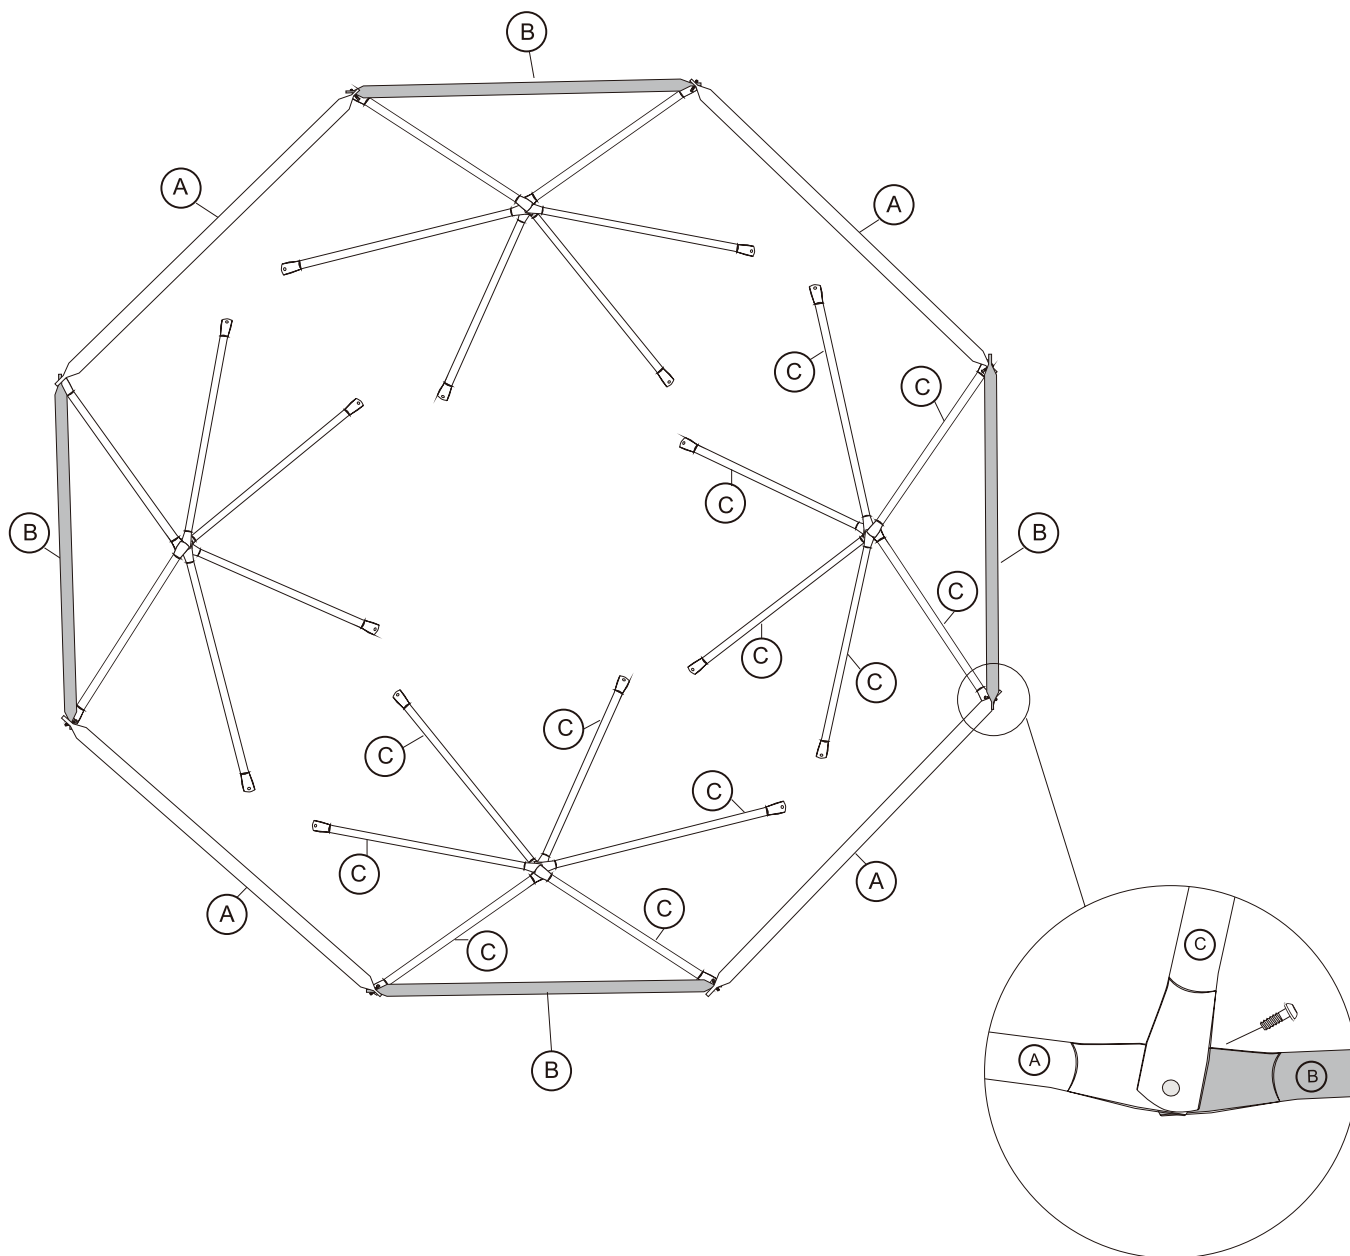


# Assembly Instructions (cont)

## Step 4

Join the hexagons together by adding two Tube B to Tube A on base, fix with nut. Connect a third Tube B using nut to lock in place.


Now the base on the dome is completed.

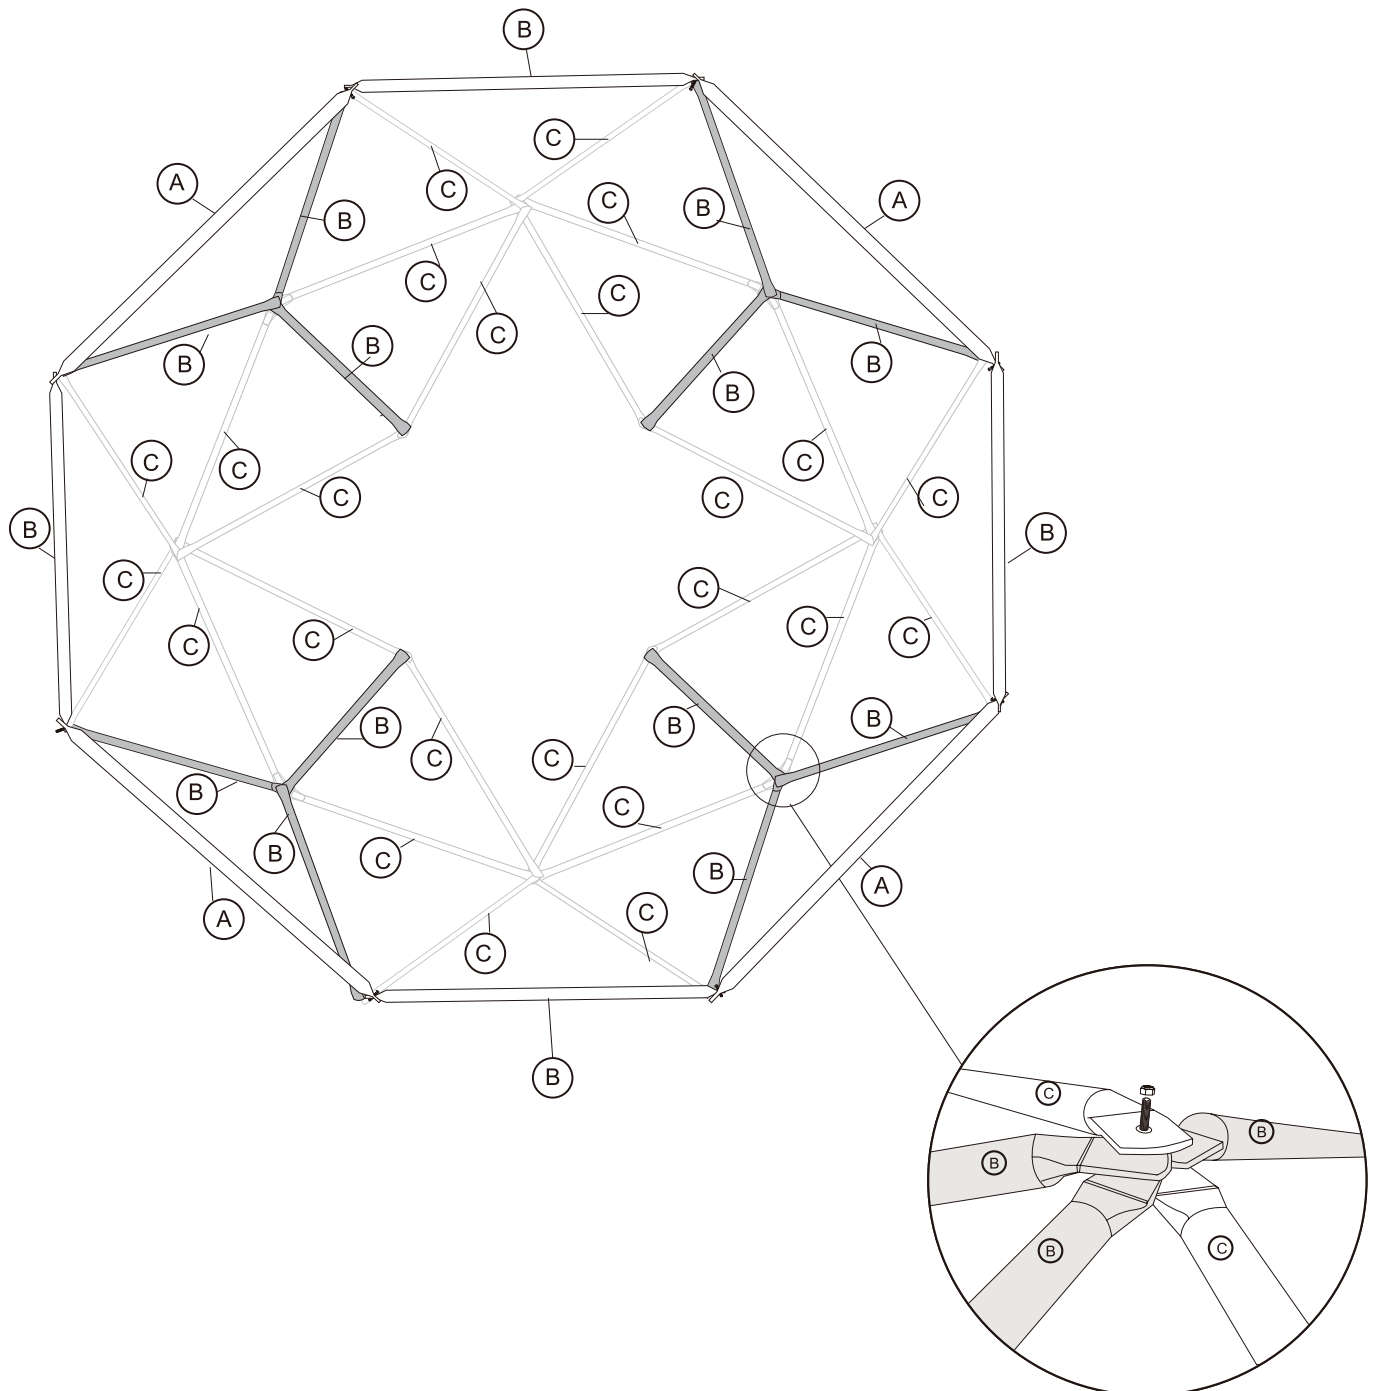

# Assembly Instructions (cont)

## Step 5

Connect the top of the hexagons using final four Tube B, fixing in place with nut.

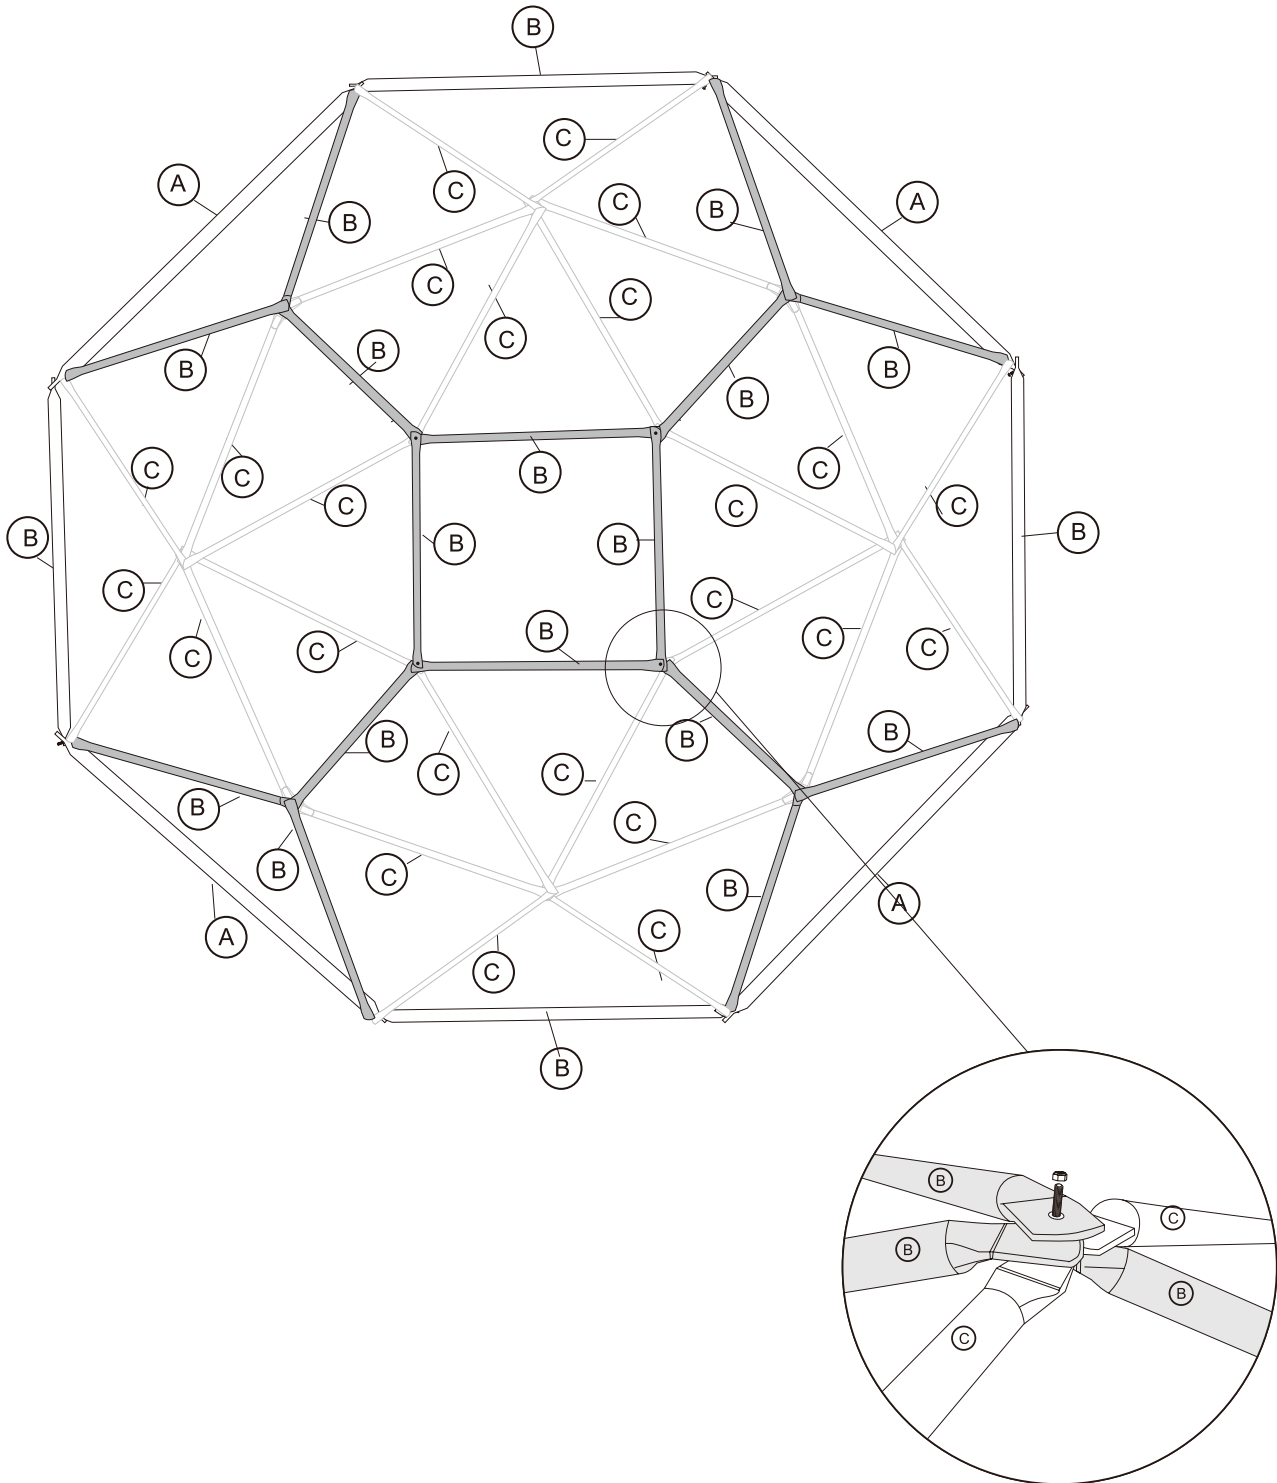


# Assembly Instructions (cont)

## Step 6

Join the final Tube A to the top square, replacing nut afterwards.

Please fully tighten all the bolts and nuts until snug.

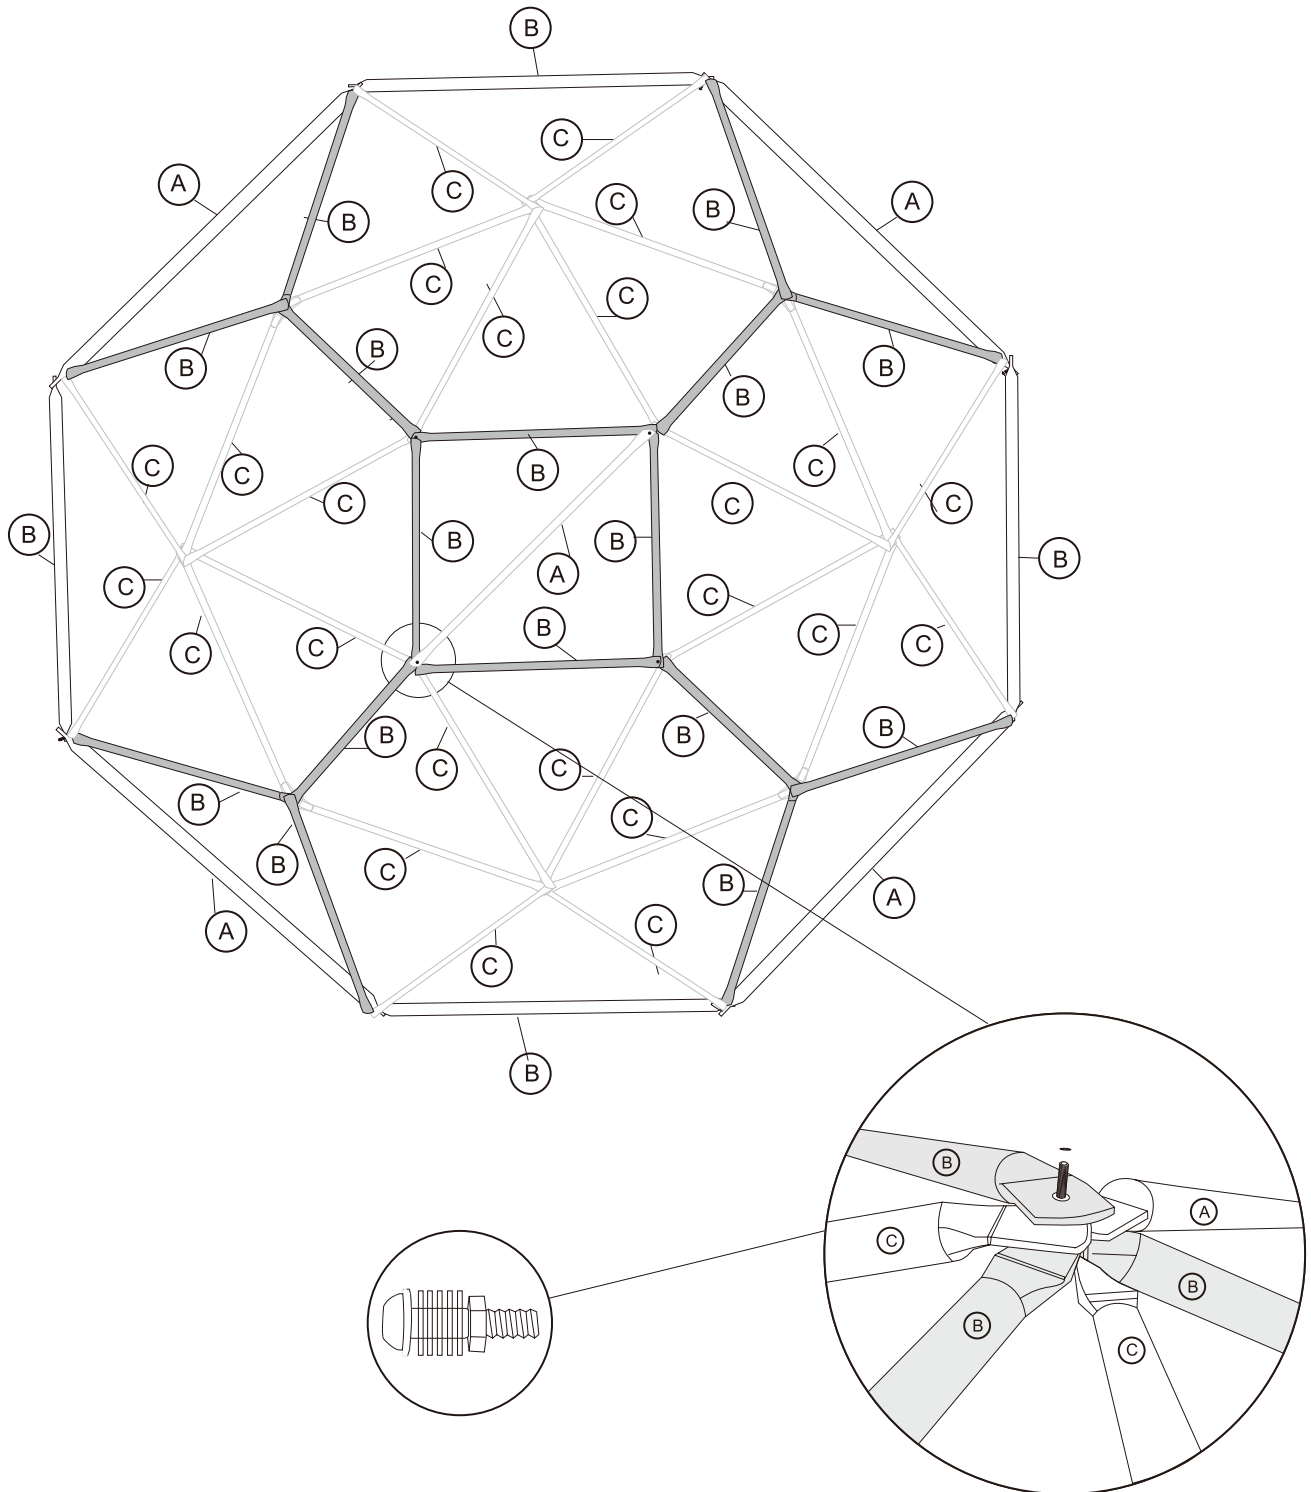

# Assembly Instructions (cont)


## Step 7

Cover the joins of the base with the small nodes x 8.

Cover the joins of remaining structure with large nodes x 12.

Use the allen key to tighten the nodes in place.

Ensure the notch of large node fits over the top of the tube join.


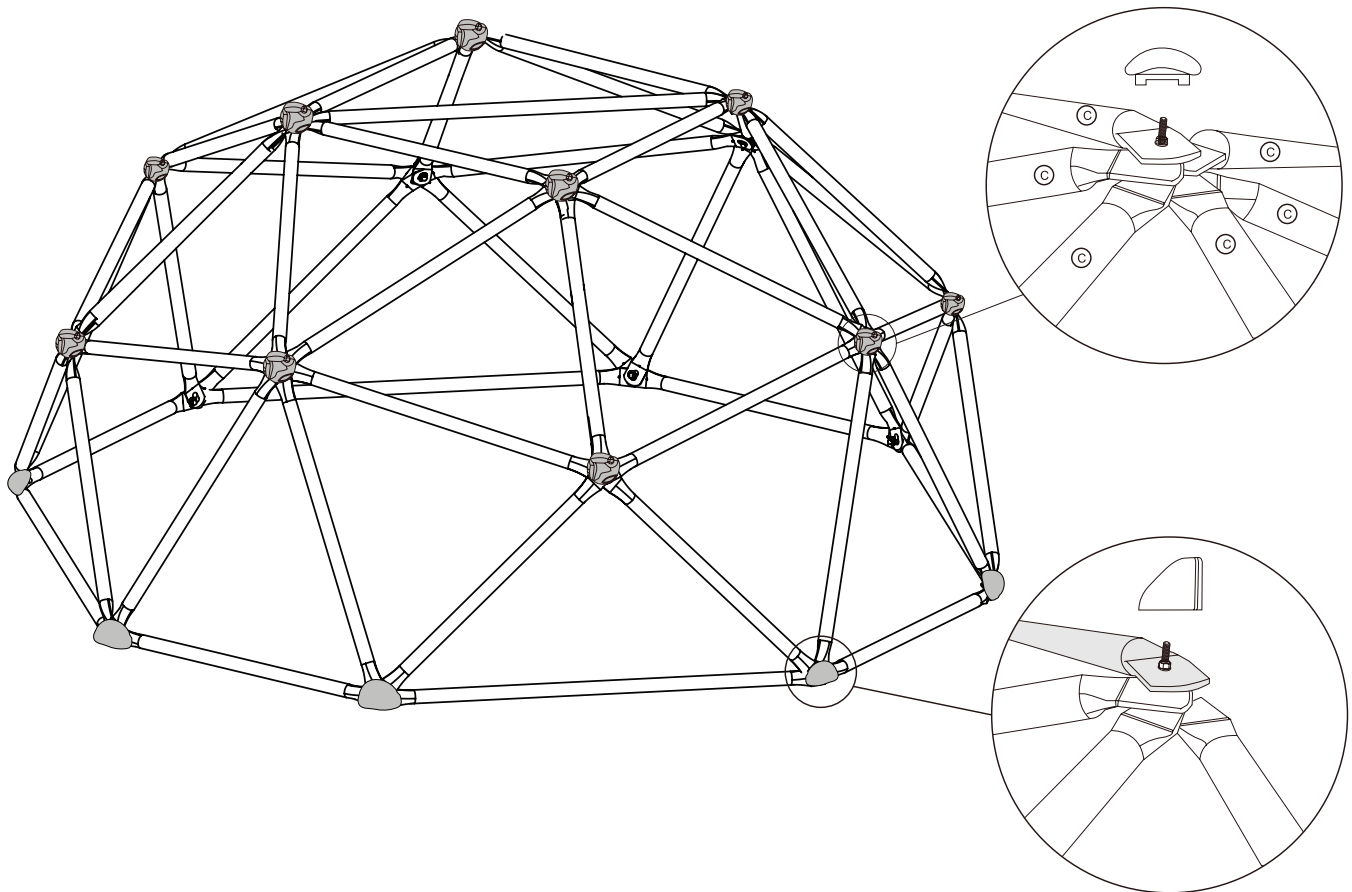


# Assembly Instructions (cont)


## Step 8

**WARNING:** For safety reasons this climbing wave **MUST** be anchored into the ground. To carry out this procedure you must hammer the included ground pegs into the ground at the angle shown in the picture above. The ground pegs must pull into hard earth and hold firmly. We highly recommend that the ground pegs be concreted but this is optional. However, if the ground is soft and the ground pegs can easily be pulled out by hand once installed then concreting is essential. Contact our Service Centre for more information if you are unsure regarding the installation of the ground pegs.

Anchors should be placed level with or under the ground in order to reduce tripping hazards.

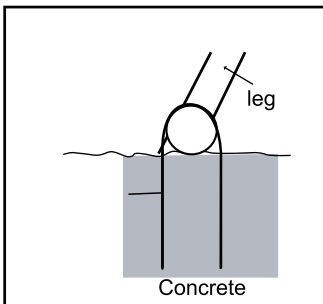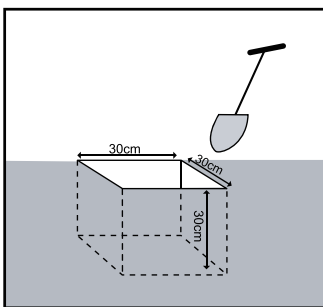

**NOTE:** Dimensions recommended for concreting the pegs.

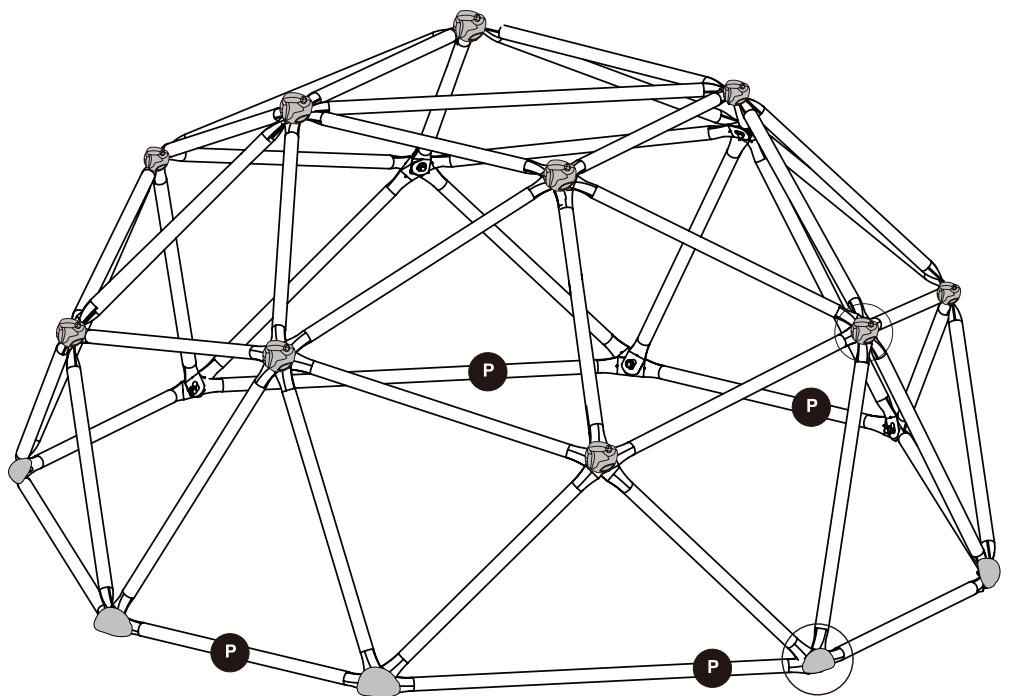

**P** Peg allocation point

Once assembly is completed, carefully check equipment. In the unlikely event that you do find any problems, please contact us. DO NOT allow children to use this product until the problem has been corrected.

## Product Safety Checks And Maintenance

Carry out checks and maintenance of the main parts at regular intervals. If these checks are not carried out, the toy could overturn or otherwise become a hazard.

Check the sharp edges of all protective covers and bolts, and replace them if necessary.

Polish rusty areas and tubular parts and repaint them with lead-free paint if necessary.

# Warranty Information

---

## Congratulations on your purchase!

This **Climbing Dome** is warranted to be free from defects in material and workmanship under normal use and service conditions for a period of **12 months**, from the date of purchase of this article. Evidence of unfair usage or incorrect adjustment by the owner will void this promise.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits conferred by this warranty are in addition to the consumer guarantees and other rights and remedies in respect of the product which the consumer has under the Australian Consumer Law.

## Conditions of Warranty

All warranty coverage extends only to the original retail purchaser from the date of purchase. Please keep your receipt, tax invoice or other proof of purchase.

This warranty does not extend to any damage to a product caused by abuse, improper or abnormal usage, or repairs not provided by us or our National Service Centre. Nor does this warranty extend to products used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning, heavy winds and by snow or ice).

## Making A Warranty Claim

In order to make a claim under this warranty please direct your enquiries to our National Service Centre. You can contact them on our **Freecall 1300 777 137** number or send mail to them at National Service Centre: 48B Egerton Street, Silverwater, NSW 2128 – if mailing please include your contact details.

A service representative will then assist you in the appropriate action to be taken. For efficient processing of your enquiry please have proof of purchase, the date of purchase, the retailer name you purchased the item from, and the brand on the product. Photos of the product, and scans of receipts, may be requested to assist with your claim.

# Warranty Information (cont)

---

The National Sales and Service Centre representative will assess the claim. If:

- 1) **There is a minor fault**, they can offer either a replacement spare part, replacement unit, repair or other suitable remedy.
- 2) **There is a major fault**, they can offer a replacement, repair or suggest you return to the store you purchased it from for a full refund.

**PLEASE NOTE:** a request for compensation will need documentary evidence of the loss or damage suffered. It will also need to be evidenced that such a loss was a reasonably foreseeable result of a failure to comply with a consumer guarantee under the Australian Consumer Law.

- 3) **The product was damaged through abnormal use**, no refund or repair can be offered.

The sending of replacements, spare parts or the cost of repair carried out will be organised and covered by the National Service Centre. If collection of the item is required this will be organised by the National Service Centre and at our expense. Do not return any products without authorisation as this will be at your expense.

Our National Sales and Service Centre has been set up to provide assembly assistance, replacement parts and accessories, and to efficiently handle all warranty related matters. Please note upon receiving your warranty claim our National Service Centre will send, via post or email, a repair and refurbished goods or parts notice.

## NATIONAL SERVICE CENTRE

**Contact details and hours of operation.**

**Freecall 1300 777 137**

9:00am – 4:30pm Monday to Friday (excluding Public Holidays)

9:00am – 3:00pm Saturday

**This product is warranted and distributed by:**

**Uncle Bills Australia of 48B Egerton St, Silverwater NSW, 2128**

**Phone: (02) 8799 3500**

© 2026 Uncle Bills Pty Ltd.

Version No: 2

Issue Date: 16 March 2026